

ADVANCED AND EVER ADVANCING **MITSUBISHI ELECTRIC**

 **MITSUBISHI**
PROGRAMMABLE CONTROLLERS
MELSEC-F

D/UL

HARDWARE MANUAL

FX₂NC (D/UL) SERIES PROGRAMMABLE CONTROLLERS

FX₂NC



Foreword

- This manual contains text, diagrams and explanations which will guide the reader in the correct installation and operation of the FX2NC and should be read and understood before attempting to install or use the unit.
- If in doubt at any stage during the installation of the FX2NC always consult a professional electrical engineer who is qualified and trained to the local and national standards. If in doubt about the operation or use of the FX2NC please consult the nearest Mitsubishi Electric distributor.
- This manual is subject to change without notice.



FX2NC (D/UL) Series Programmable Controllers

Hardware Manual

Manual number : JY992D87201

Manual revision : A

Date : MAY 2000

Guidelines for the safety of the user and protection of the FX₂NC.

This manual provides information for the installation and use of the FX₂NC. The manual has been written to be used by trained and competent personnel. The definition of such a person or persons is as follows;

- a) Any engineer who is responsible for the planning, design and construction of automatic equipment using the product associated with this manual should be of a competent nature, (trained and qualified to the local and national standards required to fulfill that role). These engineers should be fully aware of all aspects of safety with regards to automated equipment.
- b) Any commissioning or service engineer must be of a competent nature, trained and qualified to the local and national standards required to fulfill that job. These engineers should also be trained in the use and maintenance of the completed product. This includes being completely familiar with all associated documentation for the said product. All maintenance should be carried out in accordance with established safety practices.
- c) All operators of the completed product should be trained to use that product in a safe and co-ordinated manner in compliance to established safety practices. The operators should also be familiar with documentation which is connected with the actual operation of the completed equipment.

Note : The term 'completed equipment' refers to a third party constructed device which contains or uses the product associated with this manual.

Note's on the symbology used in this manual

At various times through out this manual certain symbols will be used to highlight points of information which are intended to ensure the users personal safety and protect the integrity of the equipment. Whenever any of the following symbols are encountered, its associated note must be read and understood. Each of the symbols used will now be listed with a brief description of its meaning.

Hardware warnings



1) Indicates that the identified danger **WILL** cause physical and property damage.



2) Indicates that the identified danger could **POSSIBLY** cause physical and property damage.



3) Indicates a point of further interest or further explanation.

Software warning



4) Indicates special care must be taken when using this element of software.



5) Indicates a special point which the user of the associate software element should be aware of.



6) Indicates a point of interest or further explanation.

MEMO

1. Introduction	1-1
1.1 Unit accessories.....	1-9
1.2 World Spec.	1-9
1.3 Model name	1-10
1.4 Serial numbers	1-11
1.5 Configuration.....	1-12
1.5.1 Summary	1-14
1.5.2 Current consumption and input/output points.....	1-16
1.5.3 Rules	1-20
1.5.4 System configuration example	1-23
1.5.5 Quick judgment	1-26
2. Terminal layouts.....	2-1
2.1 Main units.....	2-1
2.2 FX2NC Extension blocks	2-3
2.3 FX2N and FX0N Extension blocks	2-4

3.	Installation notes	3-1
3.1	Product outline	3-2
3.2	FX2NC RUN/STOP Control	3-4
3.3	General specifications.....	3-6
3.4	PC mounting arrangements	3-7
3.5	Connection of extension blocks to main unit.....	3-9
3.6	DIN rail mounting	3-9
3.7	Direct mounting	3-10
3.8	Extension cable installation.....	3-12
3.9	General notes	3-13
3.10	Memory Board installation	3-14
3.11	Wiring techniques	3-15
3.12	Termination of connector style I/O	3-16
3.13	Termination of screw terminals	3-17
3.14	Termination of connector style I/O cables.....	3-18
4.	Power supply.....	4-1
4.1	Power supply cautions	4-5
4.2	Earthing / Grounding.....	4-6

5. Inputs	5-1
5.1 24V DC input specifications	5-1
5.1.1 Typical wiring.....	5-2
5.1.2 Input circuit connection.....	5-4
5.1.3 Diodes and inputs connected in series;.....	5-6
5.1.4 Resistors and inputs connected in parallel;.....	5-7
5.2 AC110V input Extension block.....	5-8
5.2.1 Input circuit connection.....	5-8
5.2.2 Programming caution	5-9
6. Outputs	6-1
6.1 Transistor output specification	6-1
6.1.1 Response times.....	6-2
6.1.2 Transistor output example	6-3
6.2 Relay output specification	6-5
6.2.1 Reliability tests	6-6
6.2.2 Relay output example.....	6-7
6.3 Triac (SSR) output specifications.....	6-9
6.3.1 In-rush currents	6-10
6.3.2 Triac output example.....	6-11
6.4 Applying safe loads.....	6-11

7. Diagnostics.....	7-1
7.1 Preliminary checks.....	7-1
7.2 Basic diagnostics	7-2
7.2.1 BATT LED ON.....	7-2
7.2.2 ERROR LED flashes (PROGRAM ERROR)	7-2
7.2.3 ERROR LED ON (CPU ERROR)	7-3
7.3 Common errors	7-4
7.4 Replacing the battery	7-4
7.5 Maintenance	7-4
7.6 Error flags ON indicates error.	7-5
7.7 Error registers	7-7
7.8 Error codes	7-9
7.9 Instruction list.....	7-10

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

1. Introduction

This manual covers the hardware installation instructions for the following programmable controller (PC) product ranges;

- FX2NC main units.
- FX2NC extension blocks and special function blocks

Table 1.1 : Main units

MODEL	INPUT		OUTPUT		POWER SUPPLY	DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	TYPE					
FX2NC-16MT-D/UL	8	24V DC Sink	8	Transistor (Sink)	24V DC +20% -15% Ripple Voltage (p-p) 5% or less	35 (1.4)	90 (3.5)	87 (3.4)	0.2 (0.44)
FX2NC-32MT-D/UL	16		16			60 (2.4)			0.35 (0.77)
FX2NC-64MT-D/UL	32		32			86 (3.4)			0.45 (0.99)
FX2NC-96MT-D/UL	48		48						

Figure 1.1 :Main unit dimensions

UNITS: mm (inches)

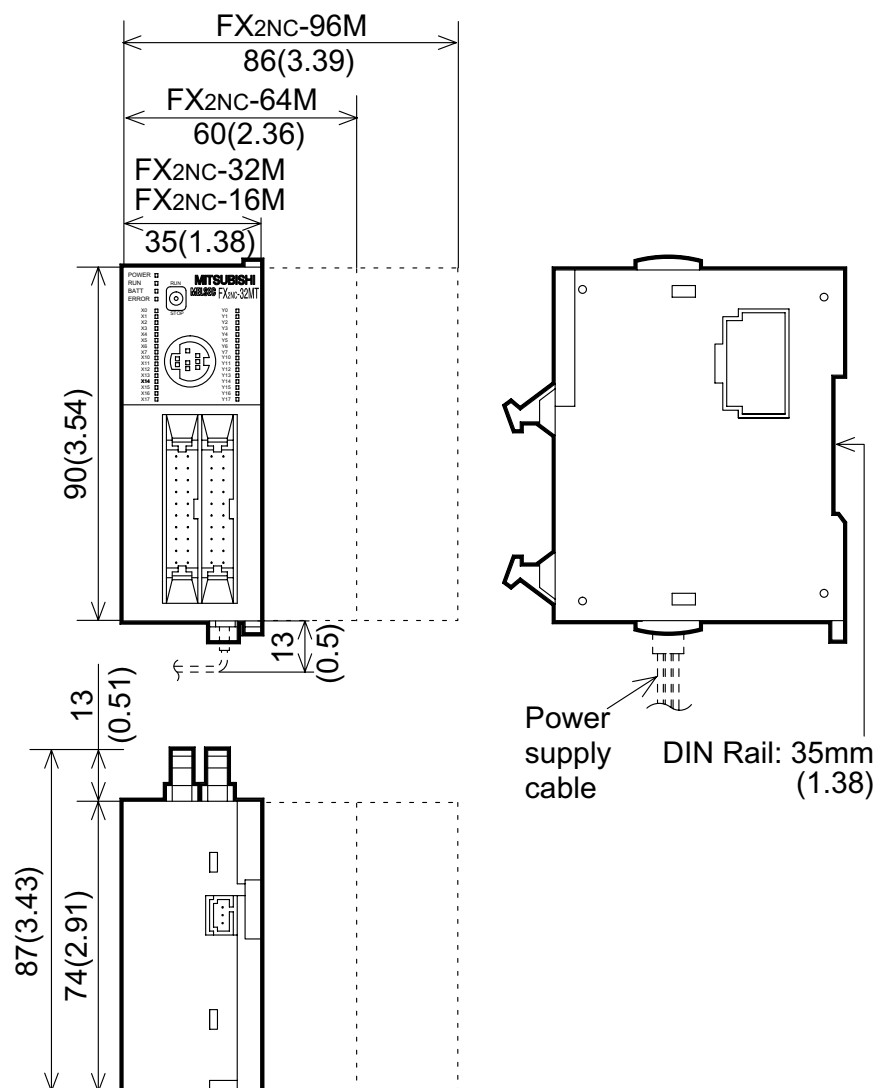


Table 1.2 : Extension blocks

MODEL	INPUT		OUTPUT			DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	DEVICE	TYPE				
FX2NC-16EX-D/UL	16	24V DC Sink	-	-	-	14.6 (0.6)	90 (3.5)	87 (3.4)	0.15 (0.33)
FX2NC-16EYT-D/UL	-	-	16	Transistor	Sink				
FX2NC-32EX-D/UL	32	24V DC Sink	-	-	-	26.2 (1.0)			0.2 (0.44)
FX2NC-32EYT-D/UL	-	-	32	Transistor	Sink				
FX0N-8EX-UA1/UL	8	110V AC inputs	-	-	-	43 (1.7)	90 (3.5)	87 (3.4)	0.2 (0.44)
FX0N-8EX-ES/UL	8	24V DC Sink/ Source	-	-	-				
FX0N-8ER-ES/UL	4		4	Relay	-				
FX0N-8EYR-ES/UL	-		8		-				
FX0N-8EYT-ESS/UL	-		8	Transistor	Source				
FX0N-16EX-ES/UL	16	24V DC Sink/ Source	-	-	-	70 (2.8)			0.3 (0.66)
FX0N-16EYR-ES/UL	-	-	16	Relay	-				
FX0N-16EYT-ESS/UL	-	-	16	Transistor	Source				

Table 1.2 : Extension blocks


MODEL	INPUT		OUTPUT			DIMENSIONS mm (inches)			MASS kg (lbs)
	QTY	TYPE	QTY	DEVICE	TYPE				
FX2N-16EX-ES/UL	16	24V DC Sink/ Source	-	-	-	40 (1.6)	90 (3.5)	87 (3.4)	0.3 (0.66)
FX2N-16EYR-ES/UL	-	-	16	Relay	-				
FX2N-16EYT-ESS/UL	-	-	16	Transistor	Source				

Table 1.3 : Connector conversion adapter

MODEL	DESCRIPTION	DIMENSIONS mm (inches)			MASS kg (lbs)
FX2NC-CNV-IF	Extension blocks and special functions blocks of FX2N and FX0N is connected by this adapter	14.6 (0.6)	90 (3.5)	74 (2.9)	0.15 (0.33)

Figure 1.2 :Extension block dimensions

UNITS: mm (inches)

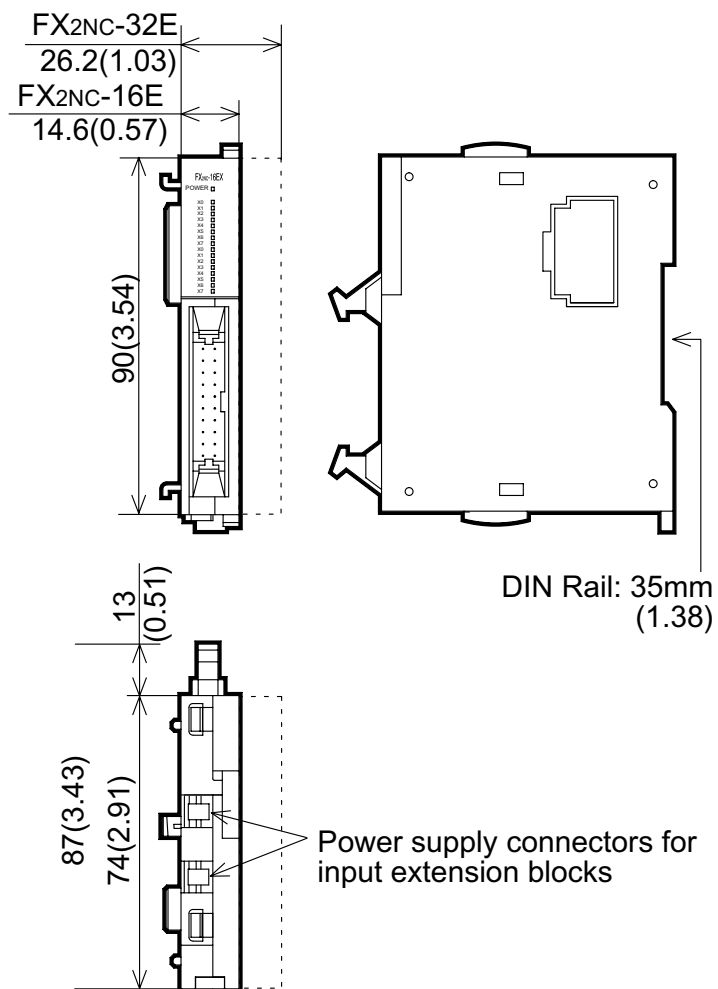

FX0N, FX2N Extension block dimensions →(See sec. 3.7)

Figure 1.3 :Connector conversion adapter

UNITS: mm (inches)

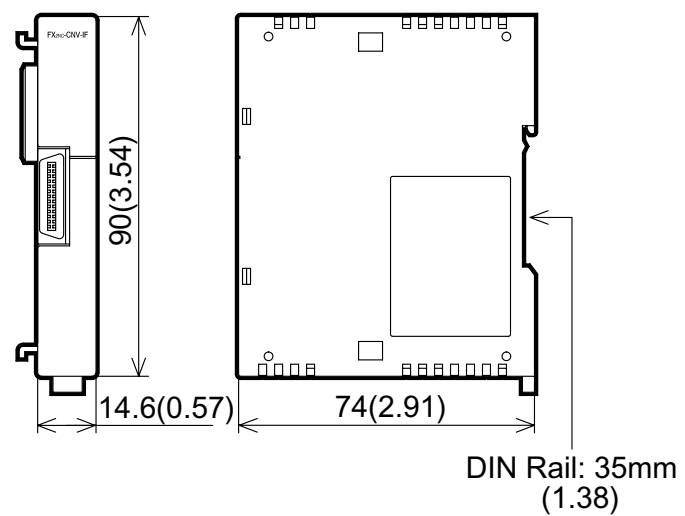


Table 1.4 :Special function blocks

MODEL	DESCRIPTION	NUMBER OF I/O			POWER SUPPLY		DIMENSIONS mm (inches)			MASS kg (lbs)
		I		O	Internal 5V DC	External 24V DC				
FX2N-2DA	Digital to analog converter	-	8	-	30mA	85mA*1	90 (3.5)	87 (3.4)	43 (1.7)	0.2(0.44)
FX2N-2AD	Analog to digital converter	-	8	-	20mA	50mA*1				
FX2N-2LC	Temperature control	-	8	-	70mA	55mA			55 (2.1)	0.3(0.66)
FX2N-4DA	Digital to analog converter	-	8	-	30mA	200mA				
FX2N-4AD	Analog to digital converter	-	8	-	30mA	55mA				
FX2N-4AD-PT	PT 100 probe interface	-	8	-	30mA	50mA				
FX2N-4AD-TC	Thermo-couple interface	-	8	-	30mA	50mA				
FX2N-1HC	High speed counter	-	8	-	90mA	-				
FX2N-1PG	Pulse output, Position control	-	8	-	55mA	40mA			43 (1.7)	0.2(0.44)
FX2N-232IF	RS232 Interface block	-	8	-	40mA	80mA			55 (2.1)	0.3(0.66)
FX2N-32CCL	CC-Link Interface block	-	8	-	130mA	50mA			43 (1.7)	0.2(0.44)
FX2N-16LNK-M	MELSEC-I/O LINK Remote I/O system master block	*2	8	*2	200mA	90mA				0.5(1.1)

Table 1.4 :Special function blocks

MODEL	DESCRIPTION	NUMBER OF I/O			POWER SUPPLY		DIMENSIONS mm (inches)			MASS kg (lbs)
		I		O	Internal 5V DC	External 24V DC				
FX0N-3A	Analog / Digital converter	-	8	-	30mA	90mA*1	43 (1.7)	90 (3.5)	87 (3.4)	0.2(0.44)
FX0N-16NT	Net-mini interface	8		8	20mA	60mA				
FX0N-32NT-DP	Profibus DP Interface	-	8	-	170mA	20mA				
FX2N-10GM	Positioning controller	-	8	-	-	5W	60 (2.4)			0.3(0.66)
FX2N-20GM		-	8	-	-	10W	86 (3.4)			0.4(0.88)
FX2N-1RM-E-SET	Programmable cam switch	-	8	-	-	210mA	55 (2.1)	111 (4.4)	97 (3.8)	0.5(1.1)

*1 : Internal 24V DC

*2 : The value depends on the switch setting.

1.1 Unit accessories

- MPU-Main unit :
FX2NC-100MPCB main unit power supply cable and FX2NC-100BPCB input extension block power supply cable.
- FX2NC Input extension block :
FX2NC-10BPCB1 input extension block power supply cable.
- FX2NC output extension and FX0N, FX2N extension block :
I / O label kit.

1.2 World Spec.

Table 1.5 : World / Japanese Spec.

Input Sink / Source	World spec models : SINK / SOURCE. Japanese models : ALWAYS SINK.
Outputs Transistor	World spec models : ALWAYS SOURCE. Japanese models : ALWAYS SINK.

1.3 Model name

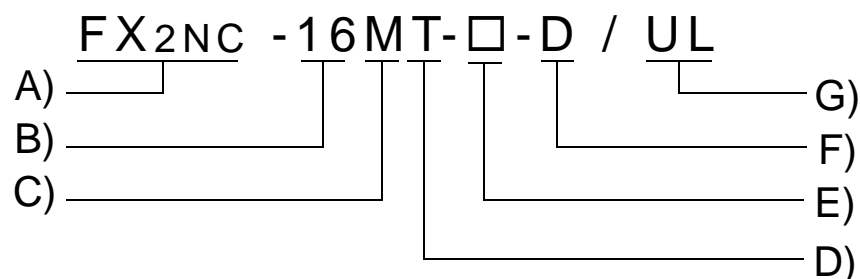


Table 1.6 : Model table

A)	PC type : FX2NC, FX2N, FX0N
B)	Total number of I / O channels
C)	Unit type
	M MPU - main unit
	E Powered extension unit
	EX Extension block, input
	EY Extension block, output
D)	Output type
	R Relay
	S Triac (SSR)
	T Transistor

E)	T	Terminal style I/O. ,Only FX2NC.
F)	Features	
	Omit	AC, Japanese spec.
	D	24V DC Japanese spec.
	DS	24V DC World spec.
	DSS	24V DC World spec., DC source transistor
	ES	AC Power Supply World spec.,DC sink transistor
	ESS	AC Power Supply World spec., DC source transistor
	UA1	AC Power Supply, AC inputs
G)	UL	CE,UL registered product

1.4 Serial numbers

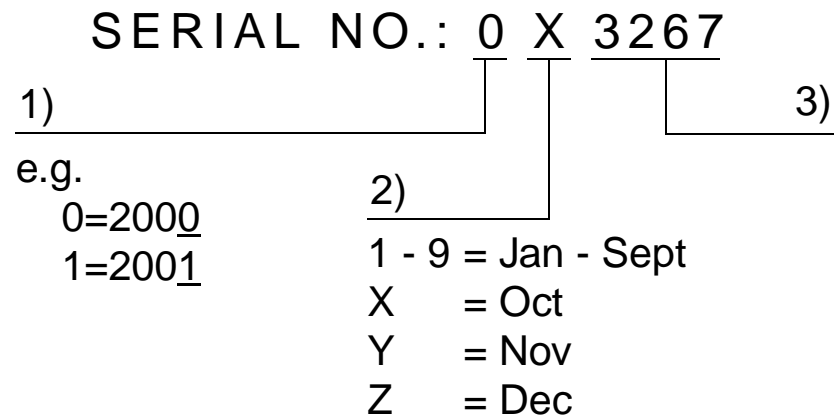


Table 1.7 : Notes on serial numbers

1)	Production year
2)	Production month
3)	Production serial number

1.5 Configuration

Figure 1.4 :Schematic system

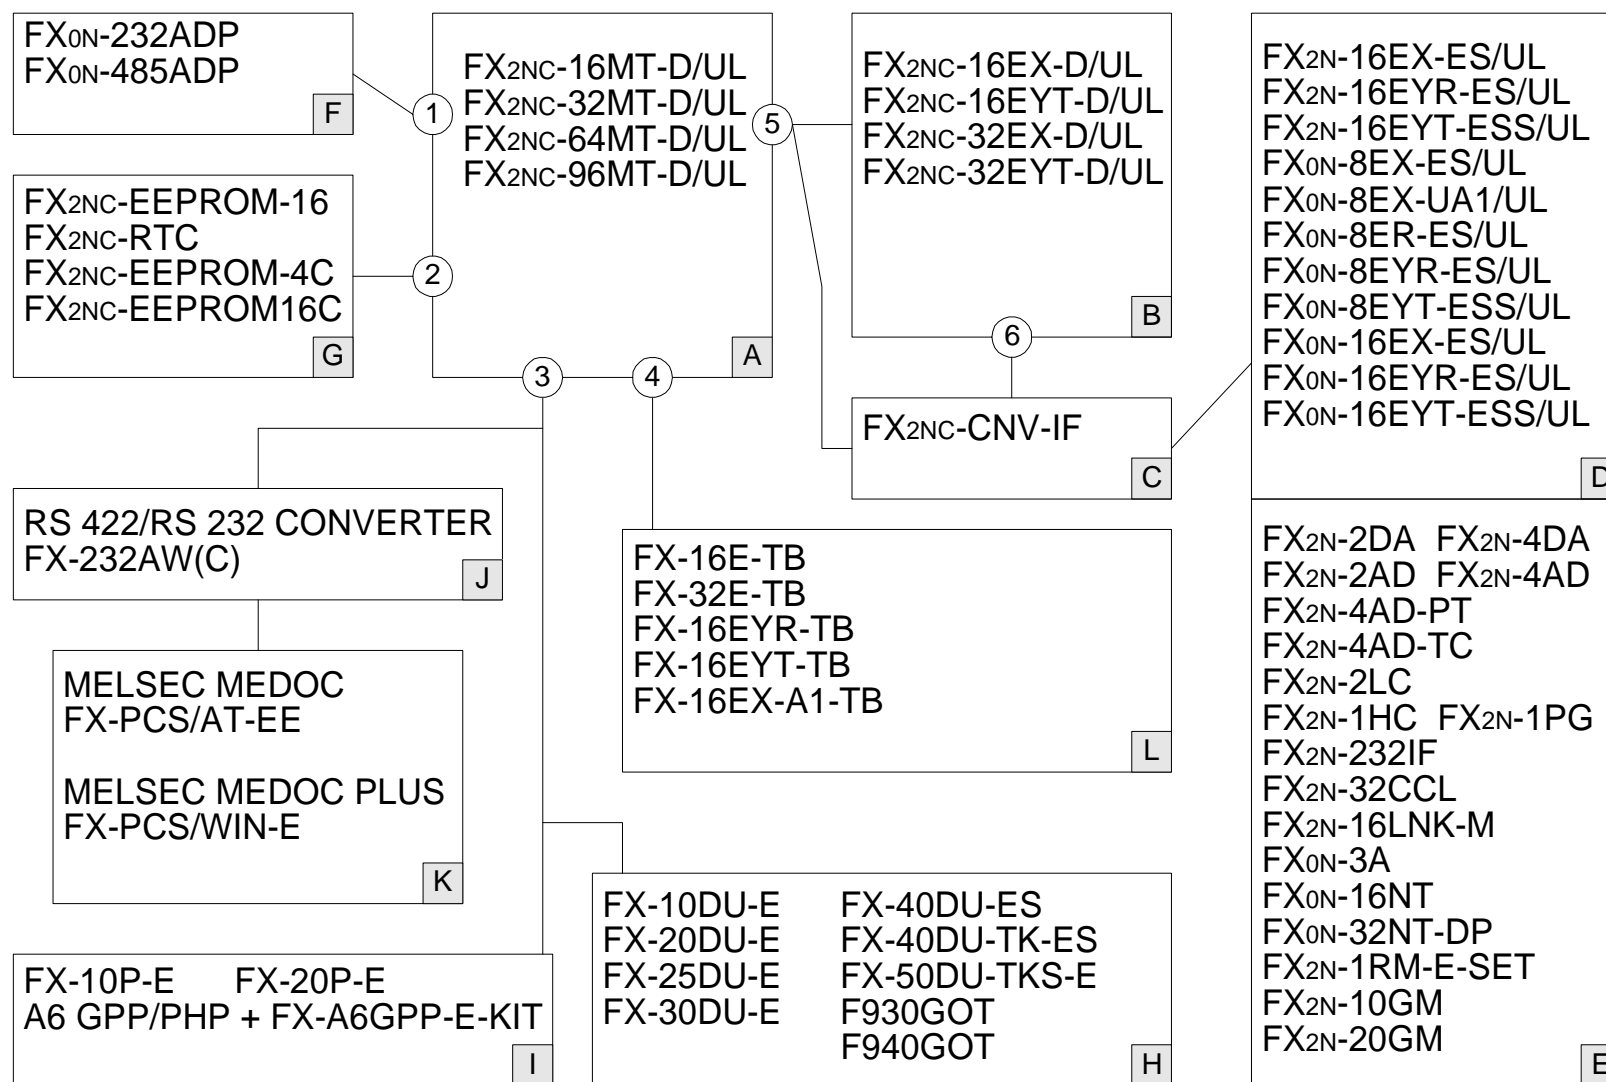


Table 1.8 : Configuration notes

A	MPU-Main unit (Main Processing Unit)
B	Extension block
C	Connector conversion adapter
D	Extension block
E	Special function block
F	Function adapters
G	Memory board (Real time clock)
H	Data access units
I	Dedicated programming
J	Computer interface
K	Computer software
L	Terminal block

①	Left hand side port
②	Memory port
③	Programming port
④	I/O port
⑤	MPU bus port
⑥	Unit bus port

1.5.1 Summary

Connection of FX2NC series extension blocks only


The FX2NC series input extension blocks and FX2NC series output extension blocks can be directly connected to the FX2NC series main unit. These input/output extension blocks can be connected in the desired order. After connection, octal numbers will be assigned to the input/output points of the extension blocks. These octal numbers are regarded as the input/output numbers. The smallest number will be assigned to the input/output point next to the main unit, and then sequentially increased for the subsequent input/output points.

Before connection, calculate the number of connectable input/output points by referring to Sec. 1.5.3, or quickly obtain this number using the table shown in Sec. 1.5.5.

	X020 X037	X040 X057		X060 X077			X100 X117	
X000-X017								
FX2NC-32MT-D/UL	16EX 16 points	16EX 16 points	16EYT 16 points	16EX 16 points	16EYT 16 points	16EYT 16 points	16EX 16 points	16EYT 16 points
Y000-Y017			Y020 Y037		Y040 Y057	Y060 Y077		Y100 Y117

Connection of FX₀N and FX₂N series extension blocks and function adapter

To connect the FX₂NC series main unit to the FX₀N or FX₂N series extension blocks, be sure to connect the FX₂NC-CNV-IF connector conversion adapter first. Following the adapter, you can connect up to 4 blocks. In addition, one special adapter can be connected to the left side of the base unit. Before connection, calculate the number of connectable input/output points by referring to Sec. 1.5.3.

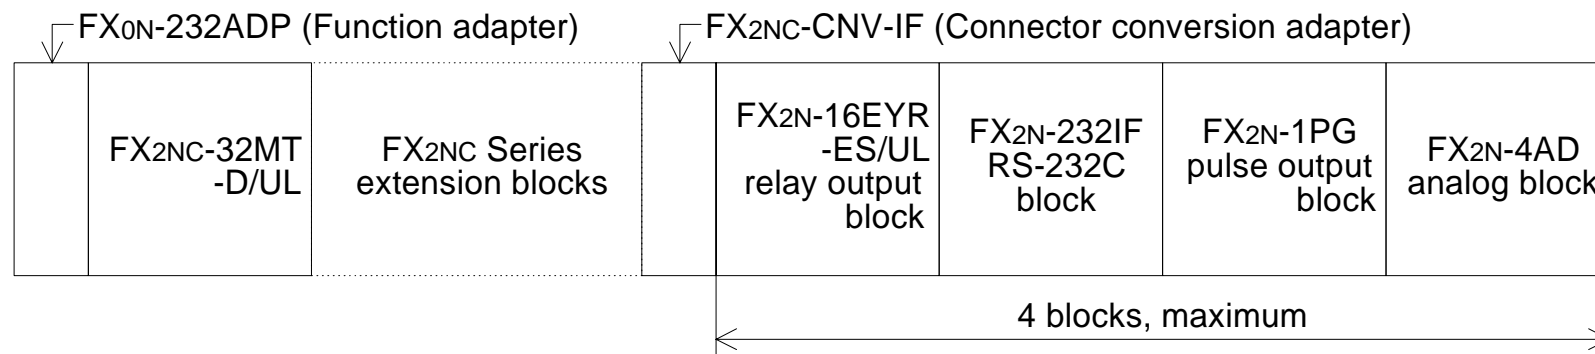

1.5.2 Current consumption and input/output points

The following tables show the current consumption and input/output points of various types of FX2NC series main units, extension blocks, and special function blocks.

While referring to Sec. 1.5.3, calculate the total current consumption and total input/output values using the following main unit values (values ❶ through ❹), extension block values, and special function block values.

Table 1.9 : Base units

MODEL	❶ CURRENT CAPACITY 5V DC	❷ INPUT X	❸ OUTPUT Y	❹ TOTAL
FX2NC-16MT-D/UL	600mA	8	8	16
FX2NC-32MT-D/UL	560mA	16	16	32
FX2NC-64MT-D/UL	480mA	32	32	64
FX2NC-96MT-D/UL	400mA	48	48	96

Table 1.10: Extension blocks

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X	OUTPUT Y	TOTAL
FX2NC-16EX-D/UL	30mA	16	-	16
FX2NC-16EYT-D/UL	50mA	-	16	16
FX2NC-32EX-D/UL	60mA	32	-	32
FX2NC-32EYT-D/UL	100mA	-	32	32
FX0N-8ER-ES/UL	25mA	4(8)	4(8)	16*1
FX0N-8EX-ES/UL	25mA	8	-	8
FX0N-8EX-UA1/UL	25mA	8	-	8
FX0N-8EYR-ES/UL	30mA	-	8	8
FX0N-8EYT-ESS/UL	30mA	-	8	8
FX0N-16EX-ES/UL	40mA	16	-	16
FX0N-16EYT-ESS/UL	40mA	-	16	16
FX0N-16EYR-ES/UL	40mA	-	16	16
FX2N-16EX-ES/UL	45mA	16	-	16
FX2N-16EYR-ES/UL	40mA	-	16	16
FX2N-16EYT-ESS/UL	180mA	-	16	16

*1: 8 points are used for actual input/output, however, this block should occupy 16 input/output points.

Table 1.11: Special function block Function adapters

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X	OUTPUT Y		TOTAL
			X/Y		
FX0N-3A	30mA	-	8	-	8
FX0N-16NT	20mA	8	-	8	16
FX0N-32NT-DP	170mA	-	8	-	8
FX2N-2AD	20mA	-	8	-	8
FX2N-4AD	30mA	-	8	-	8
FX2N-4AD-PT	30mA	-	8	-	8
FX2N-4AD-TC	30mA	-	8	-	8
FX2N-2DA	30mA	-	8	-	8
FX2N-4DA	30mA	-	8	-	8
FX2N-2LC	70mA	-	8	-	8
FX2N-1HC	90mA	-	8	-	8
FX2N-1PG	55mA	-	8	-	8
FX2N-232IF	40mA	-	8	-	8
FX2N-32CCL	130mA	-	8	-	8
FX2N-16LNK-M	200mA	*2	8	*2	*2
FX2N-10GM	-	-	8	-	8
FX2N-20GM	-	-	8	-	8

Table 1.11: Special function block Function adapters

MODEL	CURRENT CONSUMPTION 5V DC	INPUT X		OUTPUT Y	TOTAL
			X/Y		
FX2N-1RM-E-SET *3	-	-	8	-	8
FX0N-232ADP	200mA	-	-	-	-
FX0N-485ADP	30mA	-	-	-	-
FX-2PIF	290mA	-	-	-	-

*2: The value depends on the switch setting.

*3: The number which can be connected → 1 unit

1.5.3 Rules

- 1) Add the input/output points of the extension blocks and special functions blocks to the input/output points of the main unit. The total number of input points should be 184 points or less, and the total number of output points should be also 184 points or less. The total number of input and output points should be no more than 256 points.
- 2) The FX2NC series main unit supplies the control power (5V DC) to the extension blocks and special function blocks. For this reason, the total current consumption of all the blocks connected to the main unit should not exceed the current capacity of the main unit.
- 3) Next to the FX2NC-CNV-IF, up to 4 blocks can be connected. To connect a special function unit, such as the FX-10GM or FX2N-1RM-E-SET, refer to the instruction manual of the corresponding special function block.

Calculation form for system configuration

Enter current consumption values and input/output points of the extension blocks and special function blocks while referring to Sec. 1.5.2, and then calculate the total current value ⑤ and total input and output points ⑥ through ⑨. From the obtained values, judge whether the blocks can be connected.

Table 1.12 : Calculation form

Block	Model	Current consumption	Number of blocks connected	Current consumption × number of blocks	INPUT X	X/Y	OUTPUT Y
FX2NC series input extension block	FX2NC-16EX-D/UL	30 mA	blocks	mA	points		points
	FX2NC-32EX-D/UL	60 mA	blocks	mA	points		points
FX2NC series output extension block	FX2NC-16EYT-D/UL	50 mA	blocks	mA	points		points
	FX2NC-32EYT-D/UL	100 mA	blocks	mA	points		points
FX0N/FX2N series extension block (4 blocks, maximum)		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
		mA	blocks	mA	points	points	points
Function adapter		mA	blocks	mA	-		
2-port interface	FX-2PIF	mA	blocks	mA	-		
				⑤ Total current consumption: mA	⑥ Total input points: ⑦ Total output points: ⑧ Total input/output common points: ⑨ Total points:	points points points points	

Judgment form**a) 5V DC control current capacity check**

$$\begin{array}{|c|} \hline \text{5V DC current capacity of main unit} \\ \text{(value ① shown in Sec. 1.5.2): } \boxed{} \text{ mA} \\ \hline \end{array} \geq \begin{array}{|c|} \hline \text{Total current consumption of all connected blocks} \\ \text{(value ⑤ written in calculation form): } \boxed{} \text{ mA} \\ \hline \end{array}$$

b) Input/output point connection upper limit check

Input point connection upper limit : 184 points	≥	Input points of main unit (value ② shown in Sec. 1.5.2): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	+	Total input points of all connected blocks (value ⑥ written in calculation form): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	=	<div style="border: 1px solid black; width: 50px; height: 20px; display: inline-block;"></div> points
Output point connection upper limit: 184 points	≥	Output points of main unit (value ③ shown in Sec. 1.5.2): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	+	Total output points of all connected blocks (value ⑦ written in calculation form): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	=	<div style="border: 1px solid black; width: 50px; height: 20px; display: inline-block;"></div> points
Input/output point connection upper limit: 256 points	≥	Input/output points of main unit (value ④ shown in Sec. 1.5.2): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	+	Total input/output points of all connected blocks (value ⑨ written in calculation form): <div style="border: 1px solid black; width: 50px; height: 20px; margin: 0 auto;"></div> points	=	<div style="border: 1px solid black; width: 50px; height: 20px; display: inline-block;"></div> points

If all the above conditions are met, the extension and special function blocks can be connected to the base block.

If one of the above conditions is not met, reduce the number of input/output points or number of blocks, or change the types of blocks to be connected.

1.5.4 System configuration example

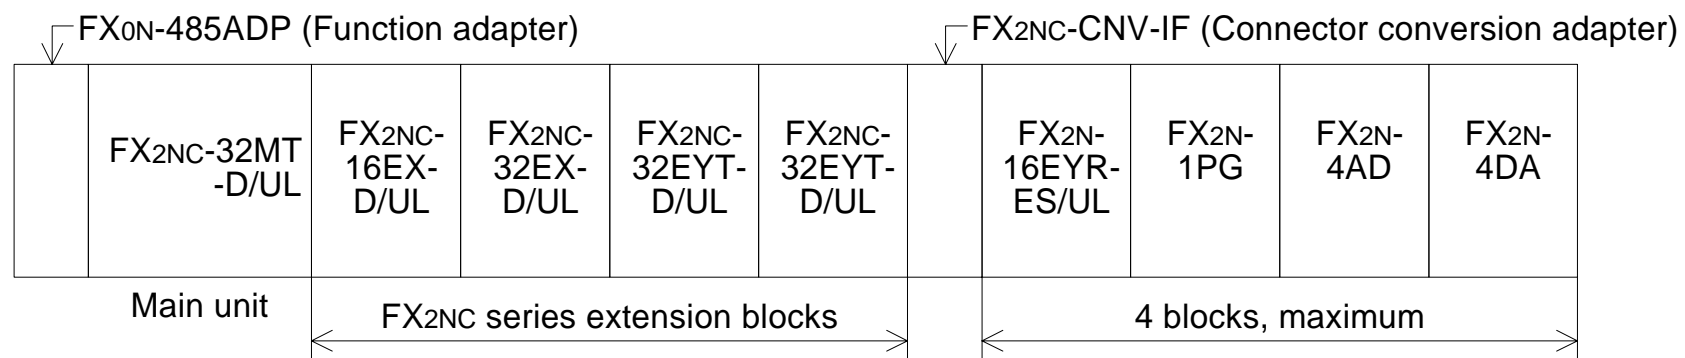


Table 1.13 : Calculation (Example)

Block	Model	Current consumption	Number of blocks connected	Current consumption × number of blocks	INPUT X	X/Y	OUTPUT Y
FX2NC series input extension block	FX2NC-16EX-D/UL	30 mA	1 blocks	30 mA	16 points		points
	FX2NC-32EX-D/UL	60 mA	1 blocks	60 mA	32 points		points
FX2NC series output extension block	FX2NC-16EYT-D/UL	50 mA	0 blocks	0 mA	points		points
	FX2NC-32EYT-D/UL	100 mA	2 blocks	200 mA	points		64 points
FX0N/FX2N series extension block (4 blocks, maximum)	FX2N-16EYR-ES/UL	40 mA	1 blocks	40 mA	points	points	16 points
	FX2N-1PG	55 mA	1 blocks	55 mA	points	8 points	points
	FX2N-4AD	30 mA	1 blocks	30 mA	points	8 points	points
	FX2N-4DA	30 mA	1 blocks	30 mA	points	8 points	points
Function adapter	FX0N-485ADP	30 mA	1 blocks	30 mA	-		
2-port interface	FX-2PIF	mA	0 blocks	0 mA	-		
				⑤ Total current consumption: 475 mA	⑥ Total input points: 48 points ⑦ Total output points : 80 points ⑧ Total input/output common points: 24 points ⑨ Total points: 152 points		

Judgment (Example)**a) 5V DC control current capacity check**

5V DC current capacity of main unit (value ❶ shown in Sec. 1.5.2): 560 mA	≥	Total current consumption of all connected blocks (value ❺ written in calculation form): 475 mA	OK
--	---	--	----

b) Input/output point connection upper limit check

Input point connection upper limit : 184 points	≥	Input points of main unit (value ❷ shown in Sec. 1.5.2): 16 points	+	Total input points of all connected blocks (value ❻ written in calculation form): 48 points	=	64 points	OK
Output point connection upper limit: 184 points	≥	Output points of main unit (value ❸ shown in Sec. 1.5.2): 16 points	+	Total output points of all connected blocks (value ❼ written in calculation form): 80 points	=	96 points	OK
Input/output point connection upper limit: 256 points	≥	Input/output points of main unit (value ❹ shown in Sec. 1.5.2): 32 points	+	Total input/output points of all connected blocks (value ❽ written in calculation form): 152 points	=	184 points	OK

Calculation result:

The 5V DC power total current consumption value and total input/output points are in the specified ranges, therefore the above system configuration is possible.

1.5.5 Quick judgment

To connect FX2NC series extension blocks only, use the following tables to quickly obtain the connectable input/output points.

Example of quick judgment:

- If 96 input points are connected to the FX2NC-32MT-D/UL main unit, up to 112 output points can be connected.
- If the number of output points are determined first, select the same number or a slightly larger number from the output points (Y) area (area marked with *1). In this case, note that you cannot increase the corresponding number of input points shown above even if the determined number of output points is slightly smaller than the number shown in the table. However, if the same number of output points are listed twice, you can select the larger number of input points.

Table 1.14: FX2NC-16M main unit (input: 8 points / output: 8 points)

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144	160	176
Output points of FX2NC series output extension block (Y)	176	176	160	160	144	144	128	112	112	96	80	64
Total points including those of main unit	192	208	208	224	224	240	240	240	256	256	256	256

←*1

Table 1.15: FX2NC-32M main unit (input: 16 points / output: 16 points)

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144	160
Output points of FX2NC series output extension block (Y)	168	160	160	144	128	128	112	112	96	80	64
Total points including those of main unit	200	208	224	224	224	240	240	256	256	256	256

↑ Example of quick judgment

Table 1.16: FX2NC-64M main unit (input: 32 points / output: 32 points)

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128	144
Output points of FX2NC series output extension block (Y)	144	144	128	112	112	96	96	80	64	48
Total points including those of main unit	208	224	224	224	240	240	256	256	256	256

Table 1.17: FX2NC-96M main unit (input: 48 points / output: 48 points)

Input points of FX2NC series input extension block (X)	0	16	32	48	64	80	96	112	128
Output points of FX2NC series output extension block (Y)	128	112	96	96	80	80	64	48	32
Total points including those of main unit	224	224	224	240	240	256	256	256	256

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

2. Terminal layouts

The following selection of terminal layouts are taken from the FX2NC product range.

Note: All layouts are diagrammatic only and are only intended to aid the creation of wiring diagrams.

2.1 Main units

FX₂NC-16MT-D/UL

IN		OUT	
X0	•	Y0	•
X1	•	Y1	•
X2	•	Y2	•
X3	•	Y3	•
X4	•	Y4	•
X5	•	Y5	•
X6	•	Y6	•
X7	•	Y7	•
COM	COM	COM1	COM1
•	•	•	•

FX₂NC-32MT-D/UL

IN		OUT	
X0	X10	Y0	Y10
X1	X11	Y1	Y11
X2	X12	Y2	Y12
X3	X13	Y3	Y13
X4	X14	Y4	Y14
X5	X15	Y5	Y15
X6	X16	Y6	Y16
X7	X17	Y7	Y17
COM	COM	COM1	COM1
•	•	•	•





FX₂NC-64MT-D/UL

IN		OUT		IN		OUT	
X0	X10	Y0	Y10	X20	X30	Y20	Y30
X1	X11	Y1	Y11	X21	X31	Y21	Y31
X2	X12	Y2	Y12	X22	X32	Y22	Y32
X3	X13	Y3	Y13	X23	X33	Y23	Y33
X4	X14	Y4	Y14	X24	X34	Y24	Y34
X5	X15	Y5	Y15	X25	X35	Y25	Y35
X6	X16	Y6	Y16	X26	X36	Y26	Y36
X7	X17	Y7	Y17	X27	X37	Y27	Y37
COM	COM	COM1	COM1	COM	COM	COM2	COM2
•	•	•	•	•	•	•	•



FX₂NC-96MT-D/UL

IN		OUT		IN		OUT		IN		OUT	
X0	X10	Y0	Y10	X20	X30	Y20	Y30	X40	X50	Y40	Y50
X1	X11	Y1	Y11	X21	X31	Y21	Y31	X41	X51	Y41	Y51
X2	X12	Y2	Y12	X22	X32	Y22	Y32	X42	X52	Y42	Y52
X3	X13	Y3	Y13	X23	X33	Y23	Y33	X43	X53	Y43	Y53
X4	X14	Y4	Y14	X24	X34	Y24	Y34	X44	X54	Y44	Y54
X5	X15	Y5	Y15	X25	X35	Y25	Y35	X45	X55	Y45	Y55
X6	X16	Y6	Y16	X26	X36	Y26	Y36	X46	X56	Y46	Y56
X7	X17	Y7	Y17	X27	X37	Y27	Y37	X47	X57	Y47	Y57
COM	COM	COM1	COM1	COM	COM	COM2	COM2	COM	COM	COM3	COM3
•	•	•	•	•	•	•	•	•	•	•	•

2.2 FX₂NC Extension blocks

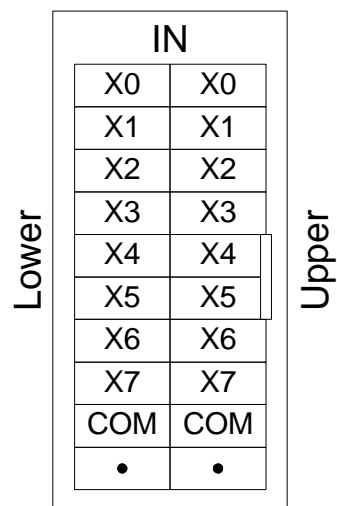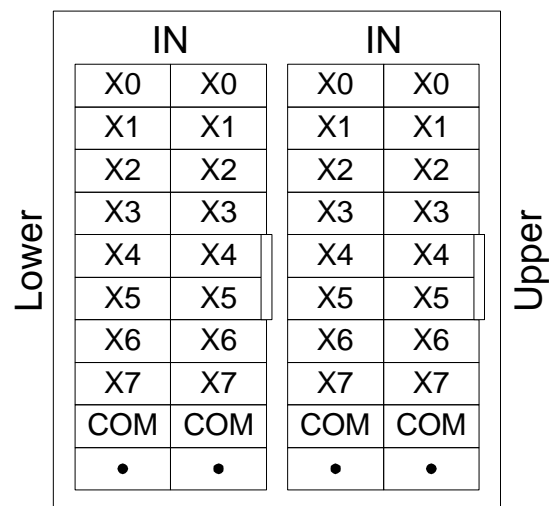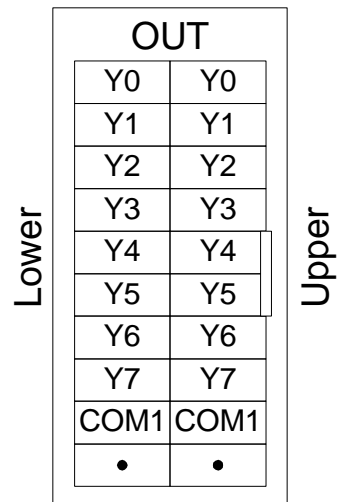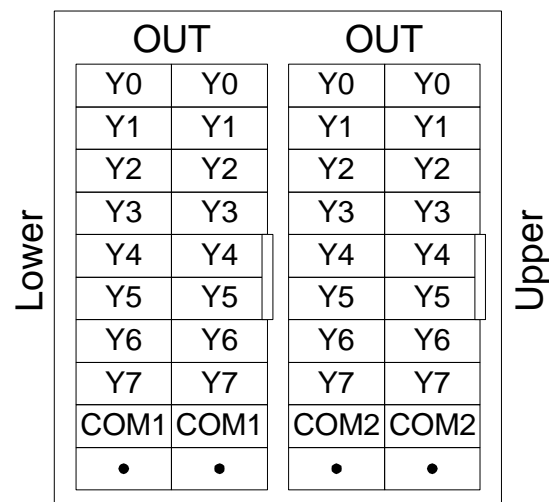FX₂NC-16EX-D/ULFX₂NC-32EX-D/ULFX₂NC-16EYT-D/ULFX₂NC-32EYT-D/UL

2.3 FX₂N and FX₀N Extension blocks

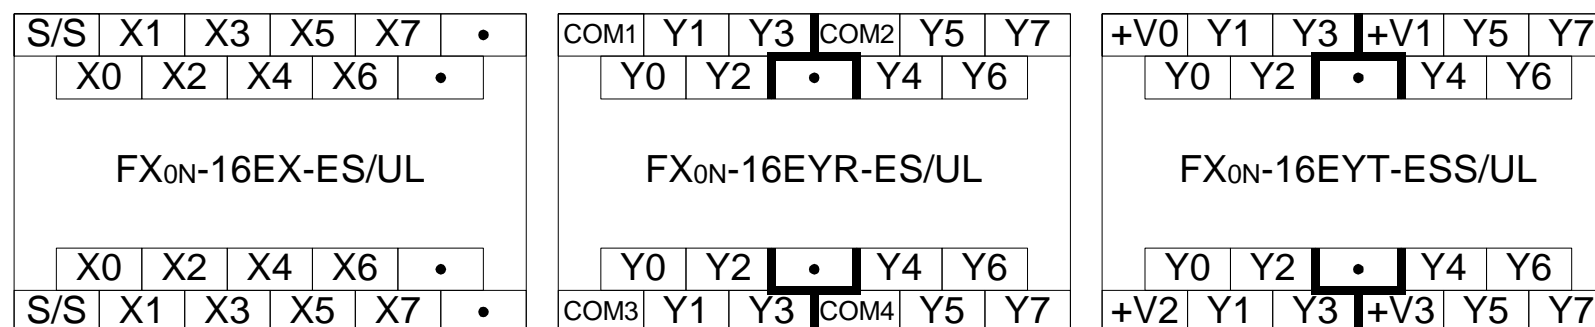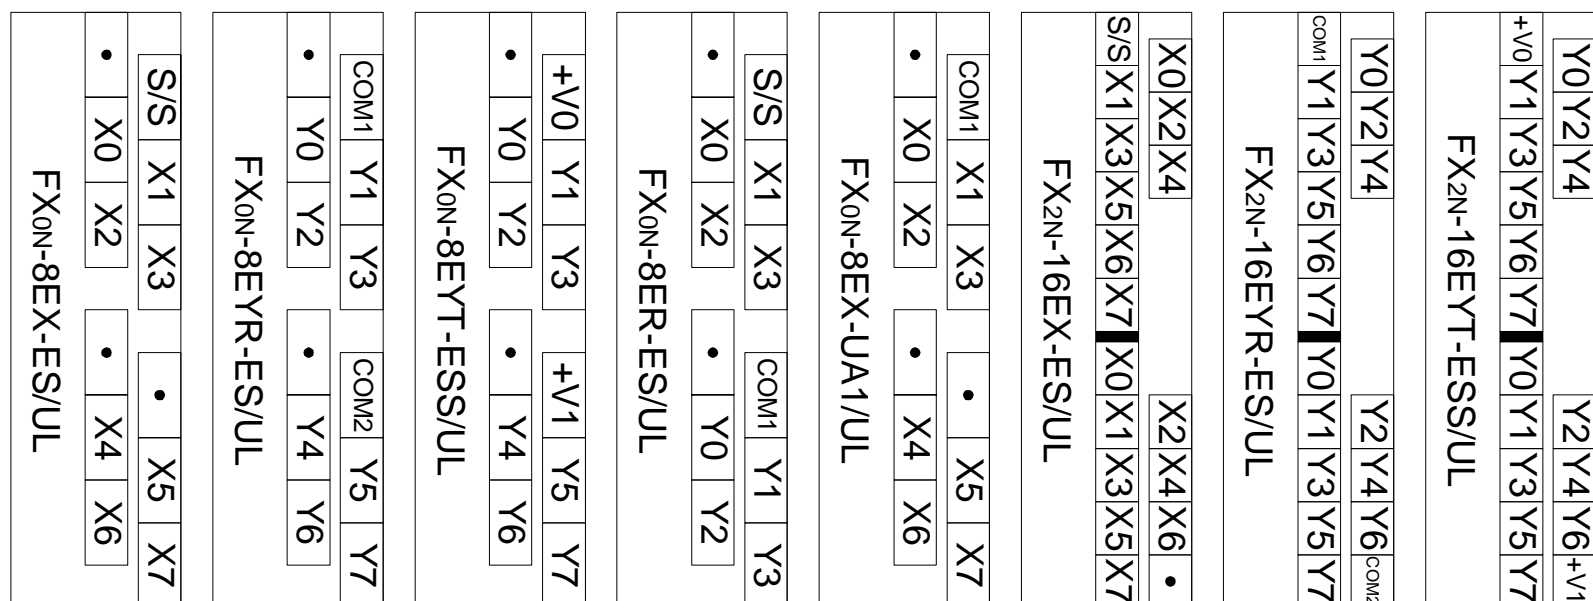

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

3. Installation notes

The installation of FX₂NC products has been designed to be safe and easy. When the products associated with this manual are used as a system or individually, they must be installed in a suitable enclosure. The enclosure should be selected and installed in accordance to the local and national standards.

3.1 Product outline

Figure 3.1: Features of the FX2NC PC

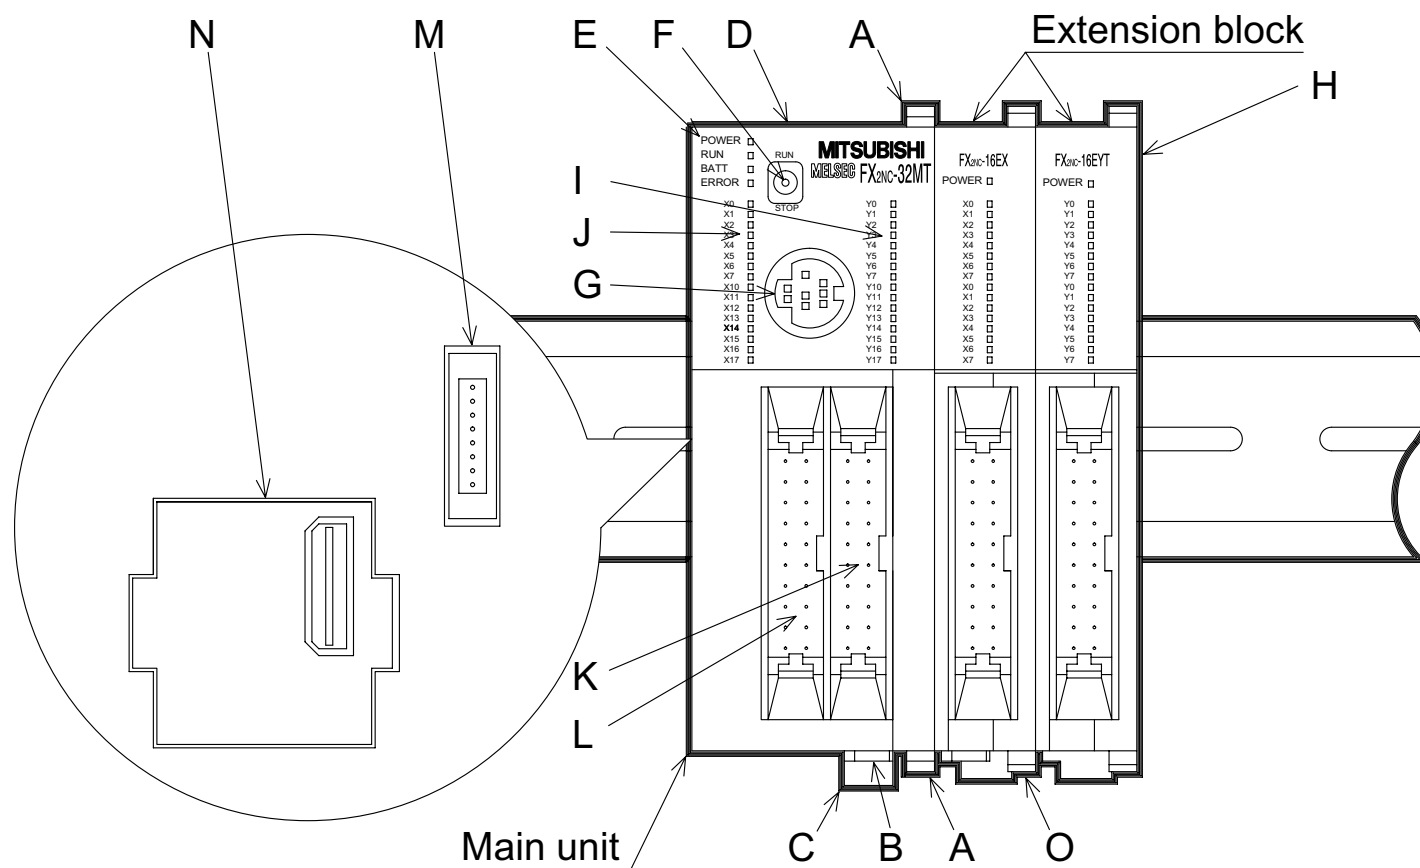


Table 3.1 : Feature table

A	Slide lock for extension I/O block
B	Power supply connector (Uses the 24V DC)
C	Din rail clip
D	Backup battery
E	Status indicators (POWER, RUN, BATT, ERROR)
F	Run / Stop switch
G	Programming port
H	Extension connector
I	Output indicators
J	Input indicators
K	Output connector or Output terminal
L	Input connector or Input terminal
M	Function adapter connector
N	Memory board / Real time clock board, connector
O	Input power supply connector, input power supply connector for crossover wiring

3.2 FX2NC RUN/STOP Control

RUN or STOP of the FX2NC can be controlled by:

- ❶ The RUN/STOP switch mounted next to the programming port.
- ❷ A standard input (X0 to X17; X0 to x7 for FX2NC-16M★ units) defined by the system parameters.
- ❸ Remotely from a personal computer or other programming peripheral.




Note: The FX2NC RUN/STOP switch ❶ works in parallel with the RUN-input terminal ❷. Please refer to table 3.2.

During remote operation the FX2NC RUN/STOP status is determined by the most recently operated control.

E.g. If the RUN/STOP switch is in RUN and a remote STOP is made from a personal computer the RUN/STOP switch must be switched to STOP then back to RUN to switch the MPU back to RUN mode.

Table 3.2 : RUN/STOP selection

① RUN/STOP SWITCH	② RUN INPUT TERMINAL	FX2NC MPU STATUS
✓	✓	RUN
✓	✗	RUN
✗	✗	STOP
✗	✓	RUN

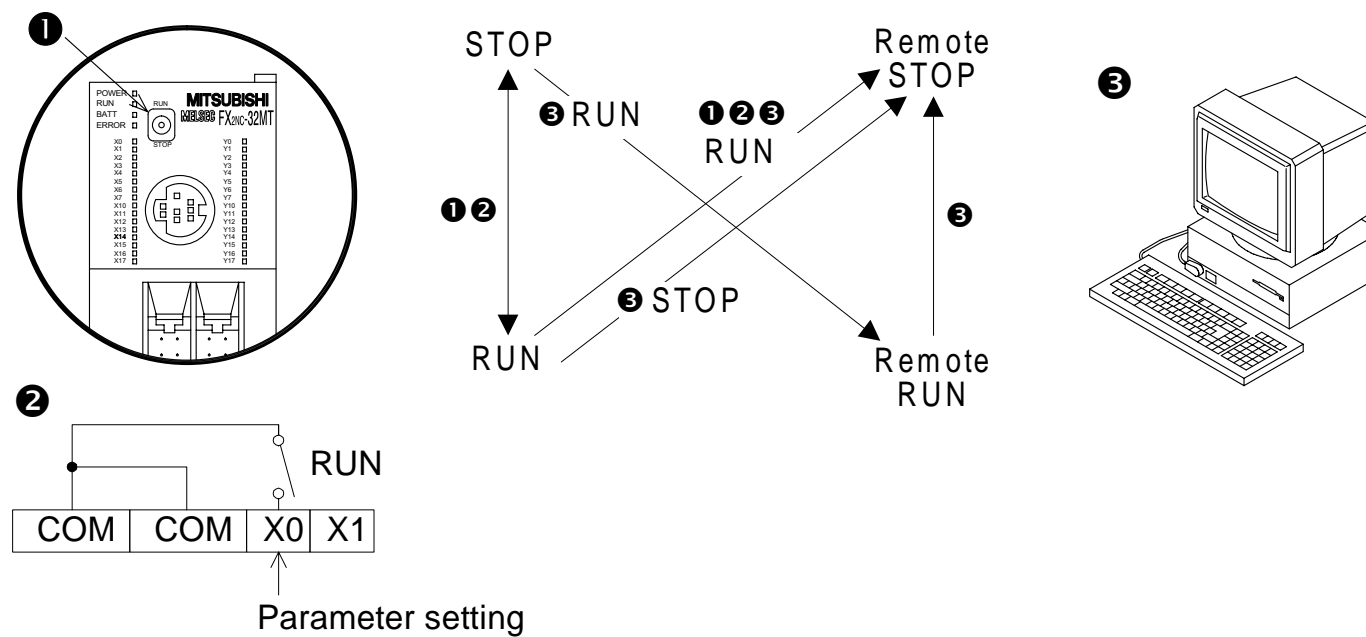Figure 3.2:

3.3 General specifications

Table 3.3: General Specifications

Item	Description
Operating Temperature	0 to 55 °C (32 to 131 °F)
Storage Temperature	-20 to 70 °C (-4 to 158 °F)
Operating Humidity	35 to 85% Relative Humidity, No condensation
storage Humidity	35 to 90% Relative Humidity, No condensation
Vibration Resistance - Direct Mounting	Conforms to JIS C0040; 10 - 57 Hz: 0.075 mm Half Amplitude 57 - 150 Hz: 9.8 m/s ² Acceleration Sweep Count for X, Y, Z: 10 times (80 min in each direction)
Vibration Resistance - DIN rail Mounting	Conforms to JIS C0040; 10 - 57 Hz: 0.035 mm Half Amplitude 57 - 150 Hz: 4.9 m/s ² Acceleration Sweep Count for X, Y, Z: 10 times (80 min in each direction)
Shock Resistance	Conforms to JIS C0041: 147m/s ² Acceleration, Action Time: 11 ms 3 times in each direction X, Y, and Z
Noise Immunity	1000 Vp-p, 1microsecond, 30 - 100 Hz, tested by noise simulator
Dielectric Withstand Voltage	500 V AC > 1 min, tested between all points, terminals and ground
Insulation Resistance	5 MΩ > at 500 V DC, tested between all points, terminals and ground
Ground	Class D (100 Ω or less)

3.4 PC mounting arrangements

To prevent a rise in temperature, mount the units to walls. Never mount them to the floor or ceiling of an enclosure.

Figure 3.3 Single row arrangement

Figure 3.4 Double row arrangement using extension cable FX₀N-65EC (650mm (25.59 inches); supplied separately).

Figure 3.2 :


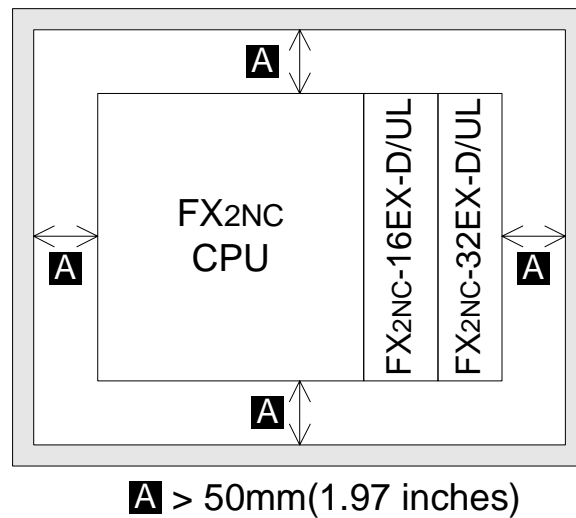


Figure 3.4 :

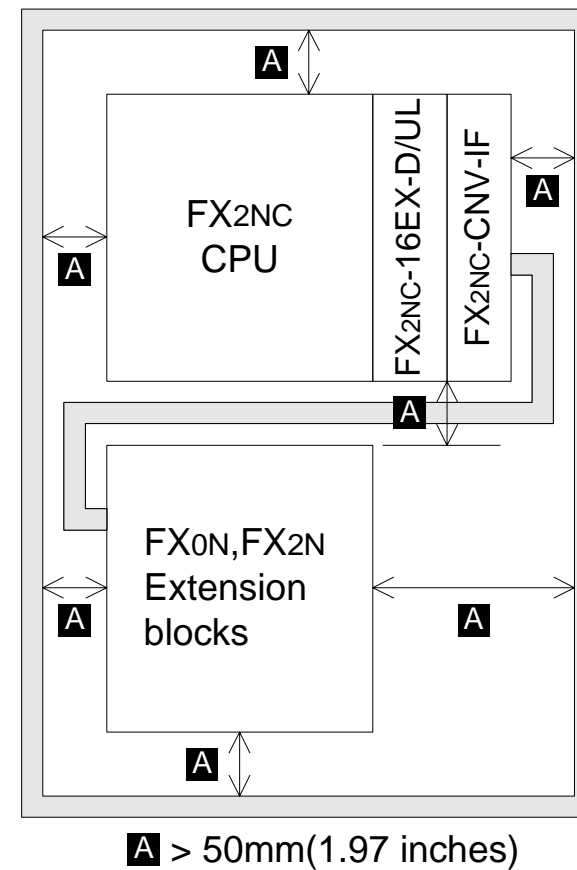


**Caution**

- Units should not be installed in areas subject to the following conditions: excessive or conductive dust, corrosive or flammable gas, moisture or rain, excessive heat, regular impact shocks or excessive vibration.
- Take special care not to allow debris to fall inside the unit during installation e.g. cut wires, shavings etc. Once installation is complete remove the protective paper band: to prevent overheating.

3.5 Connection of extension blocks to main unit

- 1) Remove the connector cover from the right side of the main unit.
- 2) Slide up the slide lock of the main unit, and then connect an extension block.
- 3) Slide down the slide lock to lock the extension block.
Connect the other extension blocks in the same way.

Figure 3.3 :

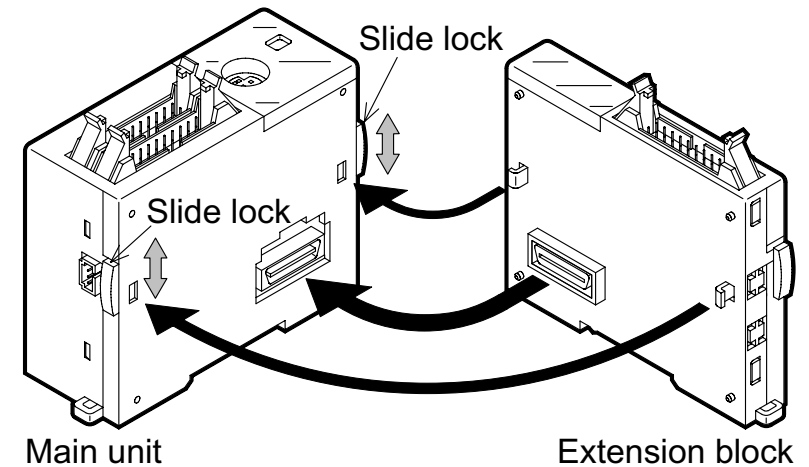


3.6 DIN rail mounting

The DIN 46277 rail (35 mm, 1.4 inches) can be directly installed on the FX2NC series programmable controller. (Do not use any screws for this installation.) To remove the main body, slightly slide down the DIN rail mounting clip. Slide the clip farther, and the rail will be locked with the clip left open.


To connect the FX2N series extension blocks, slide the DIN rail mounting clip in the arrow direction as shown in the left figure.

Figure 3.6 :

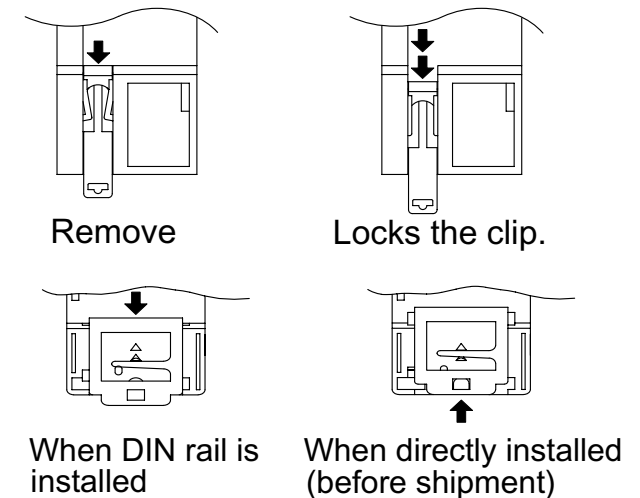

3.7 Direct mounting

Figure 3.7 :Group1

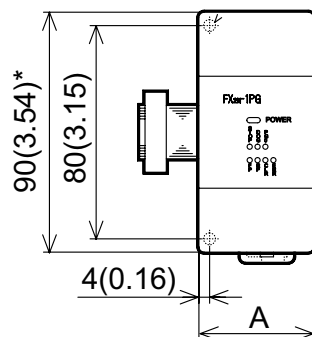


*: FX2N-1RM is 111(4.37)

Ø = 4.5mm (0.18)


UNITS: mm (inches)

Table 3.4 :

MODEL	A	MODEL	A	MODEL	A
FX2N-4DA	55 (2.16)	FX2N-2DA	43 (1.69)	FX0N-32NT-DP	43 (1.69)
FX2N-4AD		FX2N-2AD		FX0N-232ADP	
FX2N-4AD-PT		FX2N-32CCL		FX0N-485ADP	
FX2N-4AD-TC		FX2N-16LNK-M		FX0N-8E□	
FX2N-1HC		FX0N-8E			
FX2N-232IF		FX0N-3A			
FX2N-1RM		FX0N-16NT			
FX2N-2LC		FX2N-1PG			

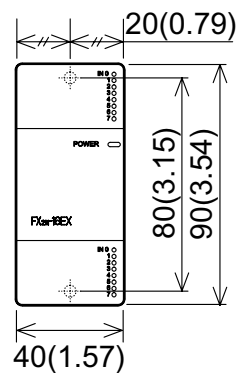
Figure 3.8:Group2

FX2N-16E□

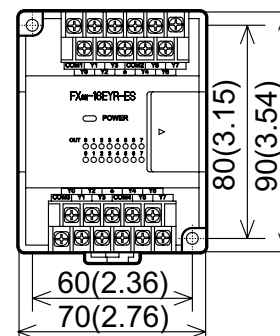

FX0N-16E□

UNITS: mm (inches)

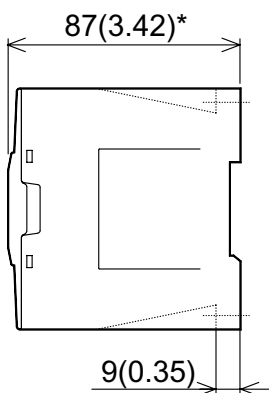Figure 3.9:Side view

* : FX2N-232IF is 85 (3.35)
 FX2N-1RM is 97(3.82)
 FX0N-232ADP is 68(2.68)

UNITS: mm (inches)

3.8 Extension cable installation

To connect extension blocks next to the FX₂NC-CNV-IF block, use the FX₀N-30EC or FX₀N-65EC extension cable. Note that only one extension cable can be used for one system. In addition, to connect extension blocks, use the FX₂N-CNV-BC connector conversion adapter as shown in the following figures.

Figure 3.10:

Connection example 1


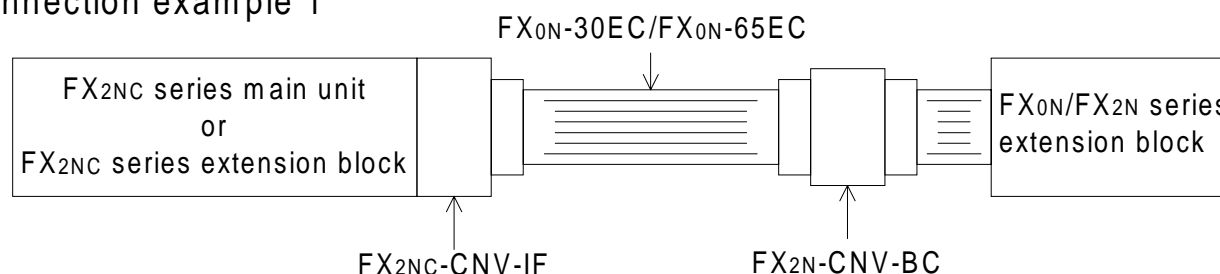


Figure 3.11:

Connection example 2



3.9 General notes

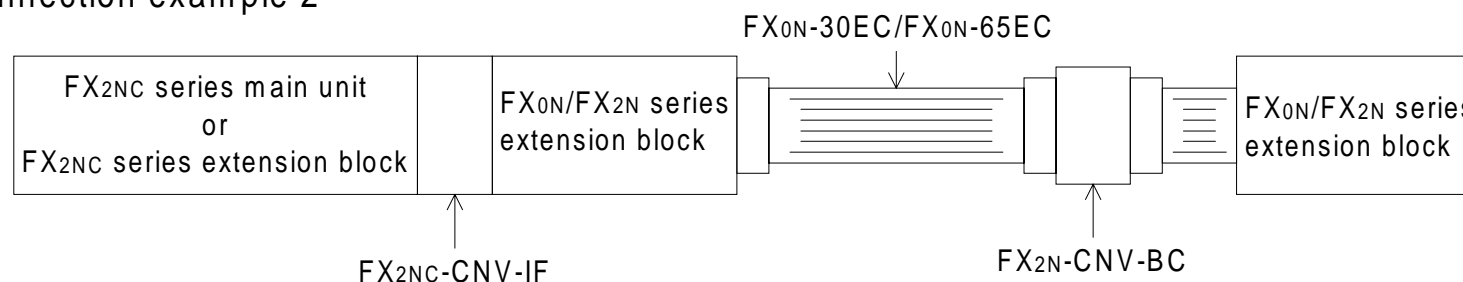

Always ensure that mounted units and blocks are kept as far as possible from high-voltage cables, high-voltage equipment and power equipment.

3.10 Memory Board installation

Figure 3.12:Installation

- 1) Turn off the power of the programmable controller.
- 2) Remove the cover from the memory board installation section.
- 3) Connect the memory board to the connector while carefully inserting the pins.


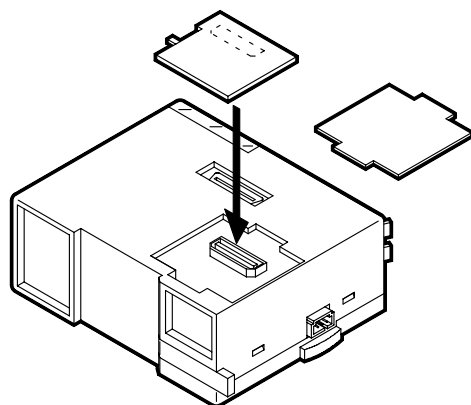


Figure 3.13:Removal

- 1) Turn off the power of the programmable controller.
- 2) Remove the cover from the memory board installation section.
- 3) Slowly pull up the lower section of the memory board, and completely remove the board.

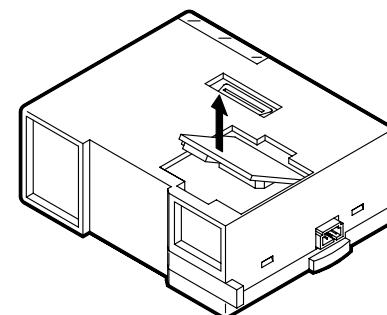

- Before removing or installing the memory board, be sure to turn off the power.
- If the memory board is removed or installed with the power on, the memory board may be damaged.
- During memory board removal or installation, be careful not to directly touch any electronic parts.

3.11 Wiring techniques

The wiring of FX2NC products has been designed to be safe and easy. If during the installation of these products or associated products concern is felt, please contact a professional electrician who is trained to the local and national standards applicable to the installation site.



Wiring cautions

- Do not run input signals in the same multicore cable as output signals or allow them to share the same wire.
- Do not lay I/O signal cables next to power to power cables or allow them to share the same trunking duct. Low voltage cables should be reliably separated or insulated with regard to high voltage cabling.
- Where I/O signal lines are used over an extended distance consideration for voltage drop and noise interference should be made.

3.12 Termination of connector style I/O

The I/O connector should be the 20-pin type and should conform to MIL C 83503 of Military Standard.

This type of connector is also used for FX2c series programmable controllers.




The output connectors of the main unit and the connector-type 16-point output extension blocks are the 16-point common type (8-point common type for the FX2NC-16MT). These output connectors have two COM1 to COM3 pins that are connected to each other inside the programmable controller. To connect the line to an external unit, shortcircuit these two pins at the external circuit so that the load of each pin can be reduced.

3.13 Termination of screw terminals

Cables terminating at a screw terminal of an FX_{2N} and FX_{0N} product should be fitted with insulated crimp terminals, see example shown. Terminals screws should be tightened to between 0.5 to 0.8 N·m. Screw terminals must be secured to prevent a loose connection from causing a malfunction.

Figure 3.14:

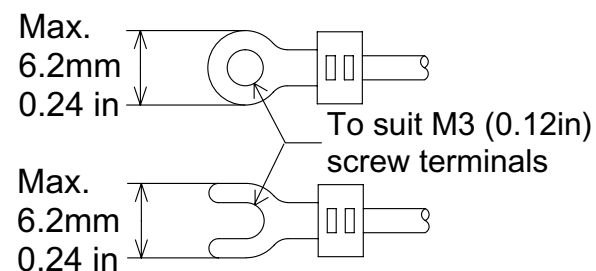

3.14 Termination of connector style I/O cables

Standard, pre-terminated cables are available from Mitsubishi in 1.5, 3 and 5 meter (4.9, 9.8 and 16.4 ft) lengths. However, users are encouraged to make their own cables to the lengths they require. The following table identifies connectors and cable requirements;

Figure 3.15:

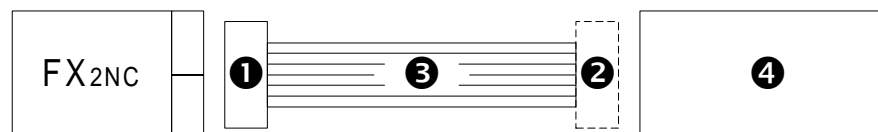


Table 3.5 :

(): ft

MODEL	LENGTH	①	②	③	④
FX-16E-500CAB-S	5m (16.4)	20 Pin connector	No connector	Single wire	Input switch or Loads
FX-16E-150CAB	1.5m (4.9)	20 Pin connector	20 Pin connector	Flat cables	TERMINAL BLOCK •FX-16E-TB •FX-32E-TB •FX-16EX-A1-TB •FX-16EYR-TB •FX-16EYT-TB
FX-16E-300CAB	3m (9.8)				
FX-16E-500CAB	5m (16.4)				
FX-16E-150CAB-R	1.5m (4.9)	20 Pin connector	20 Pin connector	Round cables	
FX-16E-300CAB-R	3m (9.8)				
FX-16E-500CAB-R	5m (16.4)				

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

4. Power supply

Table 4.1 : Power requirements

	FX2NC-16MT-D/UL	FX2NC-32MT-D/UL	FX2NC-64MT-D/UL	FX2NC-96MT-D/UL
Power supply	24V DC +20%, -15% Ripple Voltage (p-p) 5% or less			
Max. allowable momentary power failure period	5ms (5ms > PC = RUN, 5ms < PC = STOP)			
Fuse (size) rating	250V 3.15A (3A) 5φ×20mm (0.2×0.79 inches)			
In-rush current	30A or less 0.5ms/24V DC			
Power consumption *1	6W	8W	11W	14W

*1 Includes the input current (7 or 5 mA per point).

Table 4.2 :Power consumption of FX2nc extension blocks


When connecting extension blocks, add the values shown below to the power consumption value of the main unit.

Type	Model	Power consumption
Input extension	FX2NC-16EX-D/UL	2.2W *2
	FX2NC-32EX-D/UL	4.2W *2
Output extension	FX2NC-16EYT-D/UL	0.35W
	FX2NC-32EYT-D/UL	0.7W
Special extension	See sec. Table 1.4	

*2 Includes the input current (5 mA per point).

- To supply the power to the main unit, use the power cable FX2NC-100MPCB.
- To supply the power to an input extension block, use the power cable FX2NC-100BPCB. To supply the power to the second input block or later, perform crossover wiring using the power cable FX2NC-10BPCB1.

Figure 4.1 : Connection of power supply cables

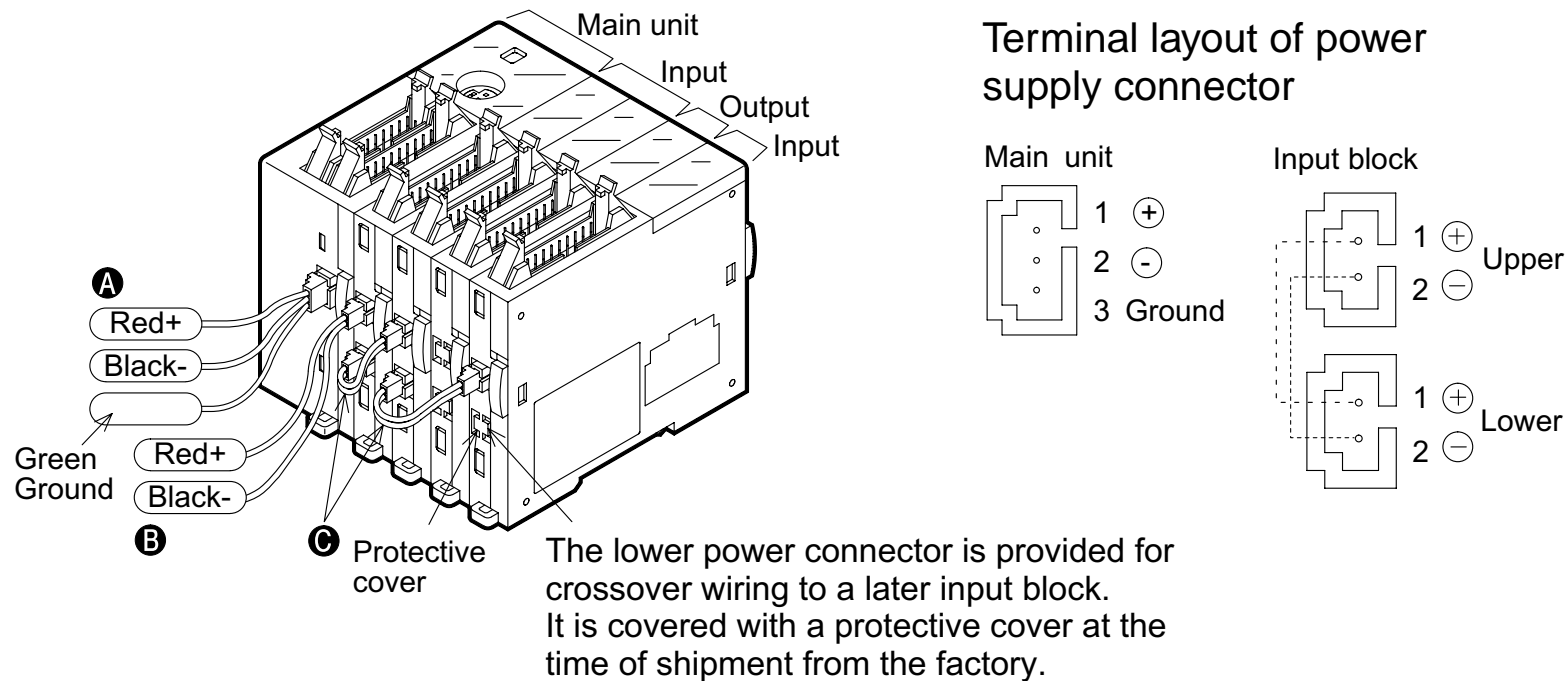

Three types of power cables shown below are offered. **A** and **B** are offered with the main unit, and **C** is offered with an input extension block.

Table 4.3 :


Type	Application	Model name	Length	Product in same package
A	Power cable for main unit	FX2NC-100MPCB	1m(3.3ft)	Main unit
B	Input power cable for input extension block	FX2NC-100BPCB	1m(3.3ft)	
C	Input power cable for input extension block (for crossover wiring)	FX2NC-100BPCB1	0.1m(0.3ft)	Input extension block

The crossover cable **C** can be wired across up to four 16-point output blocks. To supply the power to an input block beyond four output blocks, use the cable **B**.



For the 24V DC power source of the FX or FX2N series programmable controllers, the correction value should be written in data register D8008; a special data register that sets the power failure detection period. However, for the FX2NC series programmable controllers, it is not necessary to write the correction value.

The data stored in the D8008 register will be automatically corrected by the system program. Do not modify the D8008 data.

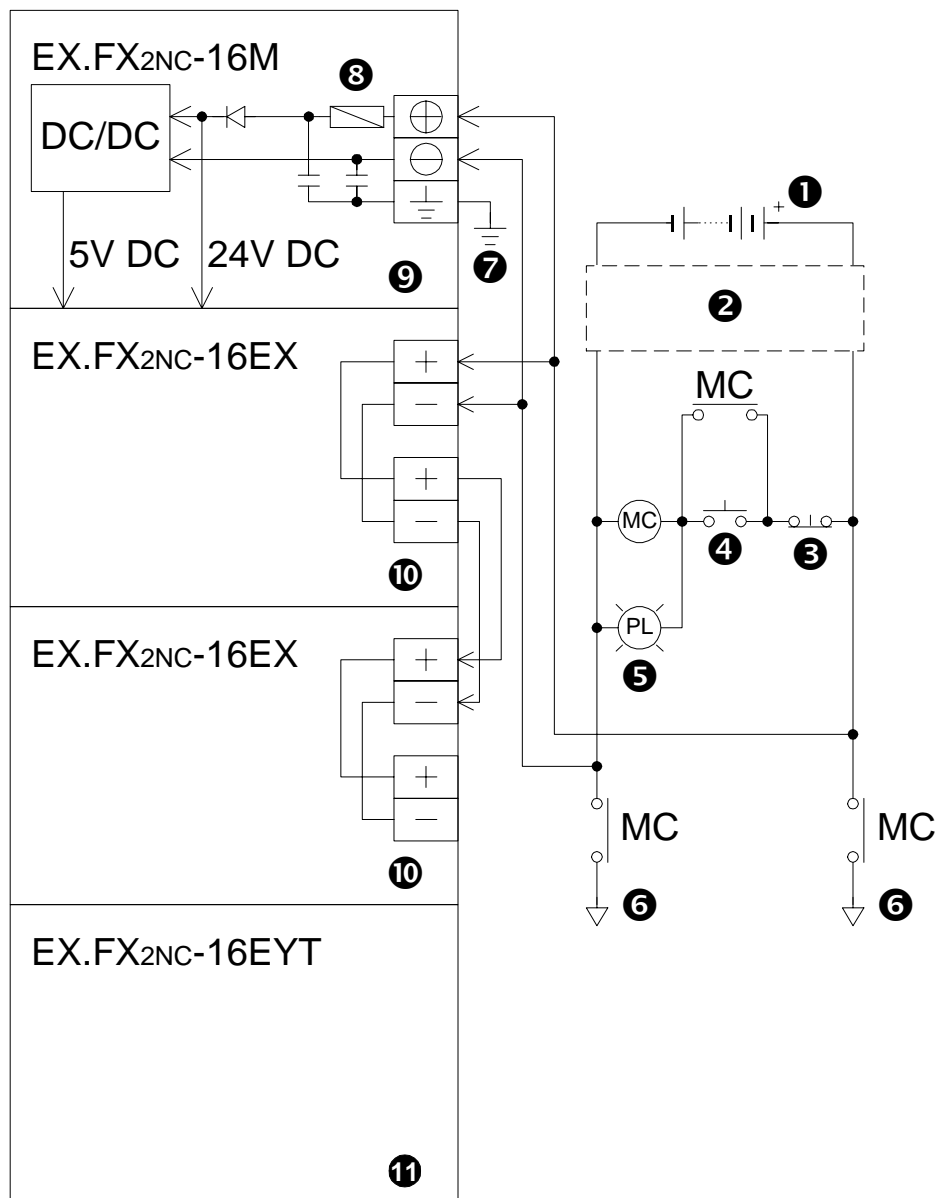Figure 4.2 : EX.wiring


①	Power supply 24V DC +20% -15% Ripple voltage (p-p) 5% or less
②	Circuit protector or Fuse
③	Emergency stop
④	Power supply switch
⑤	Power ON pilot indicator
⑥	Power supply for loads
⑦	Grounding resistor 100Ω or less (class D)
⑧	Fuse
⑨	Main unit
⑩	Input extension blocks
⑪	Output extension block

4.1 Power supply cautions



As shown in the following figure, supply 24V DC to the main unit, special function blocks, and data access unit from the same power source.


Figure 4.3 : Use of same power source

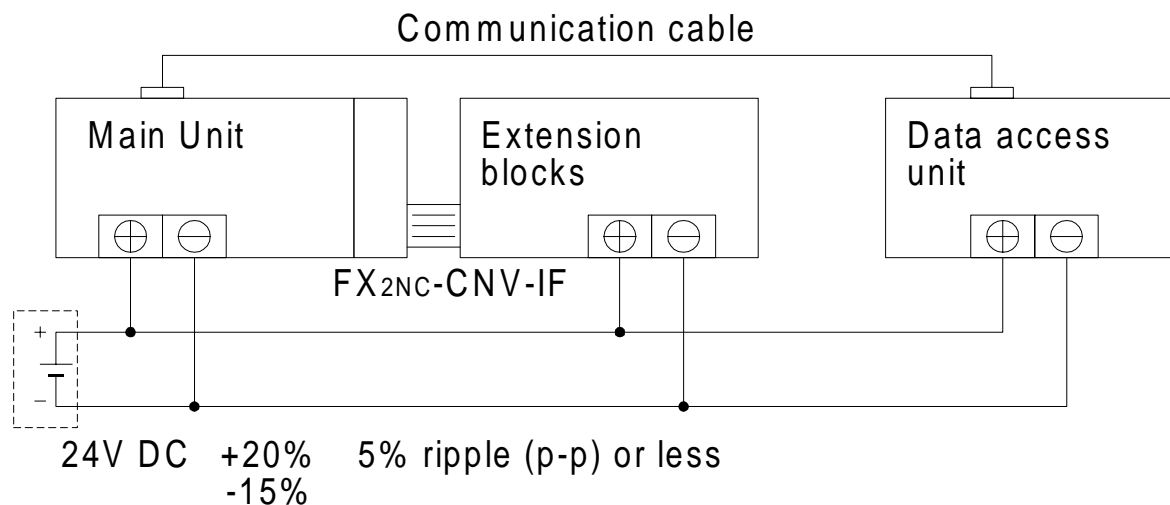



If the power has to be supplied from two power sources due to low capacity of the DC power supply unit, etc., be sure to connect the minus lines of the two power supply units.

Figure 4.4: Connection of minus lines

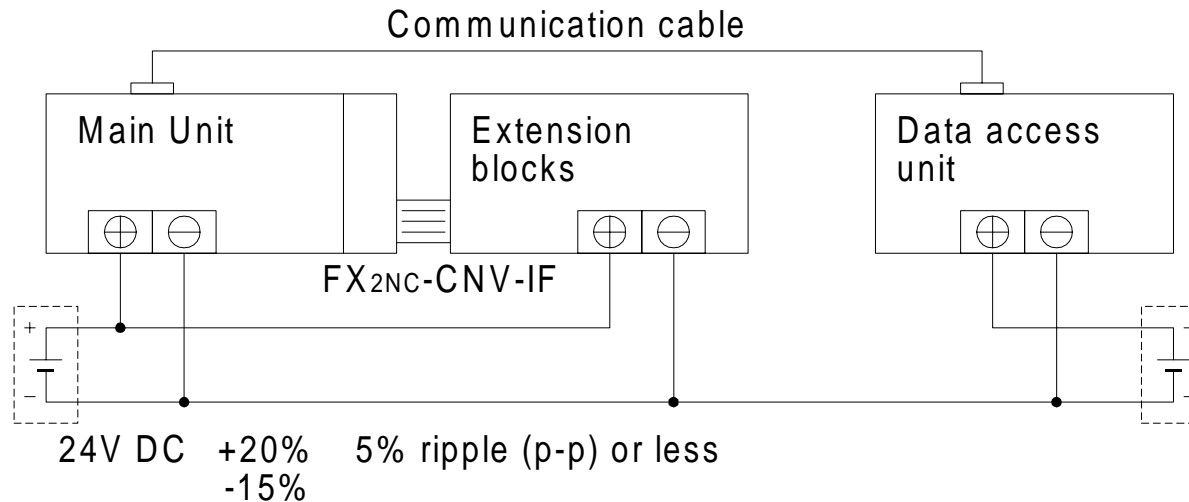

4.2 Earthing / Grounding



Use a cable at least 0.2mm² (AWG24) to ground equipment. Ground resistance must be less than 100Ω (class D). Note that the ground cable must not be connected to the same ground as the power circuits. Grounding is recommended but if a proper ground cannot be provided the PC will still operate correctly without being grounded.

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

5. Inputs

5.1 24V DC input specifications

Table 5.1 :FX2NC input specifications

		FX2NC main unit, extension block		FX0N, FX2N Extension block
		X0 → X7	X10 → ∞	
Input voltage		24V DC +20%, -15%		
Input current		24V DC, 7mA	24V DC, 5mA	24V DC, 5mA
Input switching current	OFF → ON	>4.5mA	>3.5mA	>3.5mA
	ON → OFF	<1.5mA		
Response time		10ms		
Variable response time		X000-X017 0-60ms (FX2NC-16M★ : X000-X007)		---
Circuit isolation		Photocoupler		
Operation indication		LED is lit		

5.1.1 Typical wiring

Figure 5.1 : sink

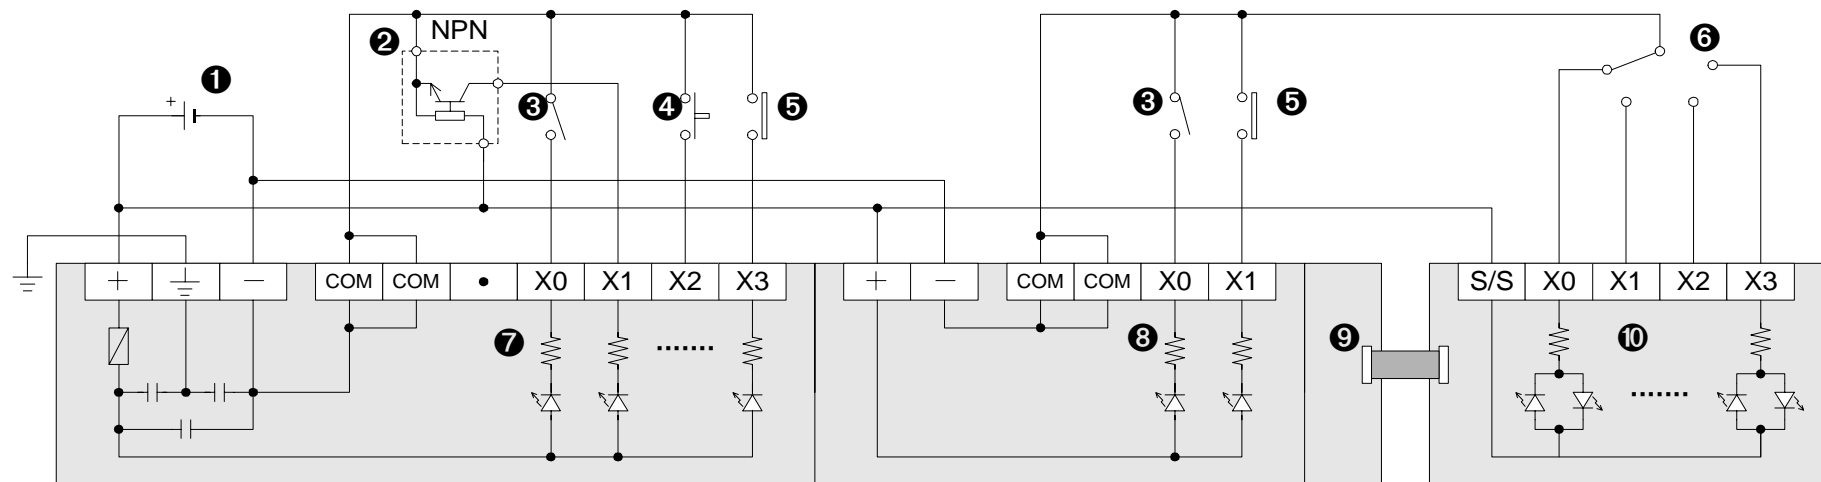


Table 5.2 : Item check

①	External power supply 24V DC +20% -15%
②	NPN proximity sensor
③	Switch
④	Push button
⑤	Contact
⑥	Rotary switch
⑦	MPU main processing unit (main unit)
⑧	FX2NC Input extension block
⑨	FX2NC-CNV-IF Connector conversion adapter
⑩	FX0N, FX2N Extension block

5.1.2 Input circuit connection

Figure 5.2 : FX2NC Main unit and FX2NC Extension block

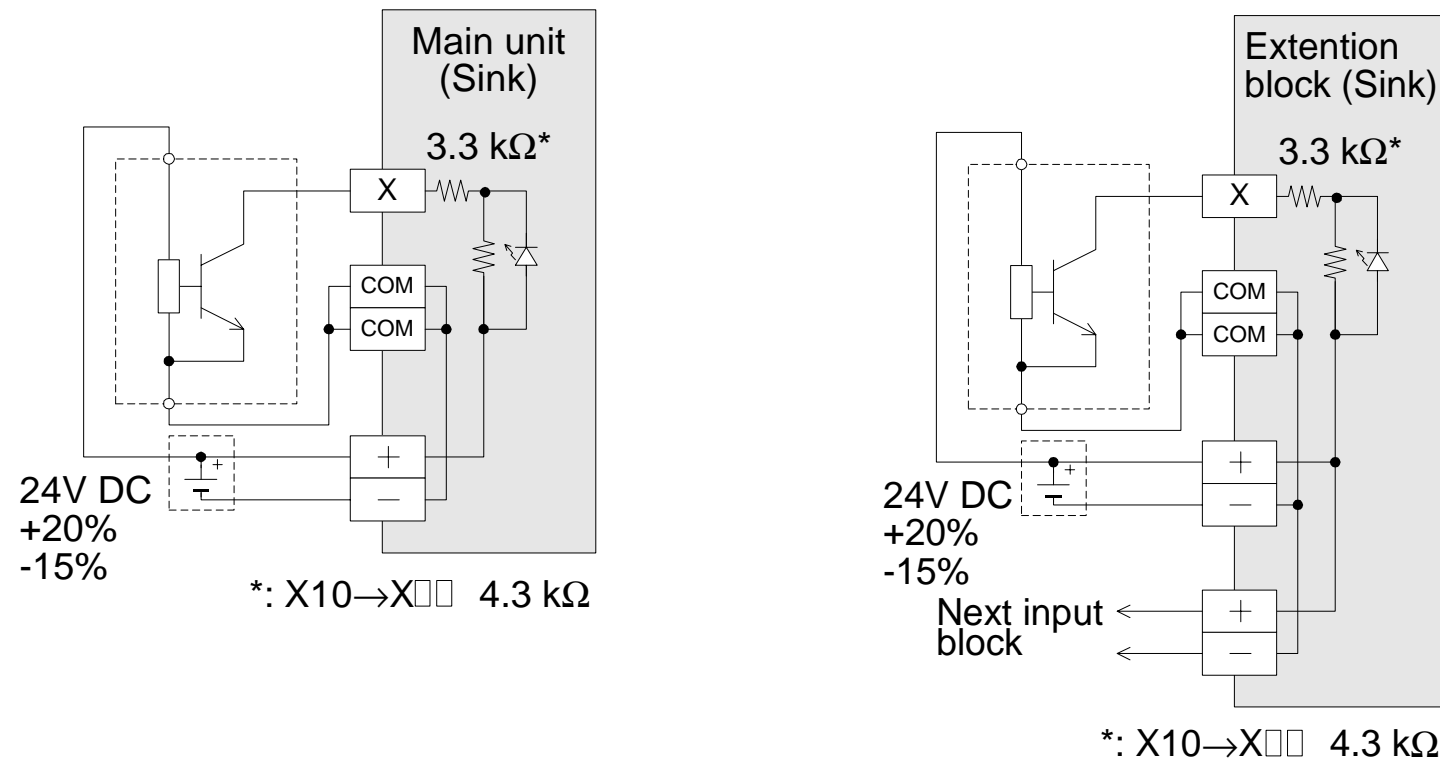
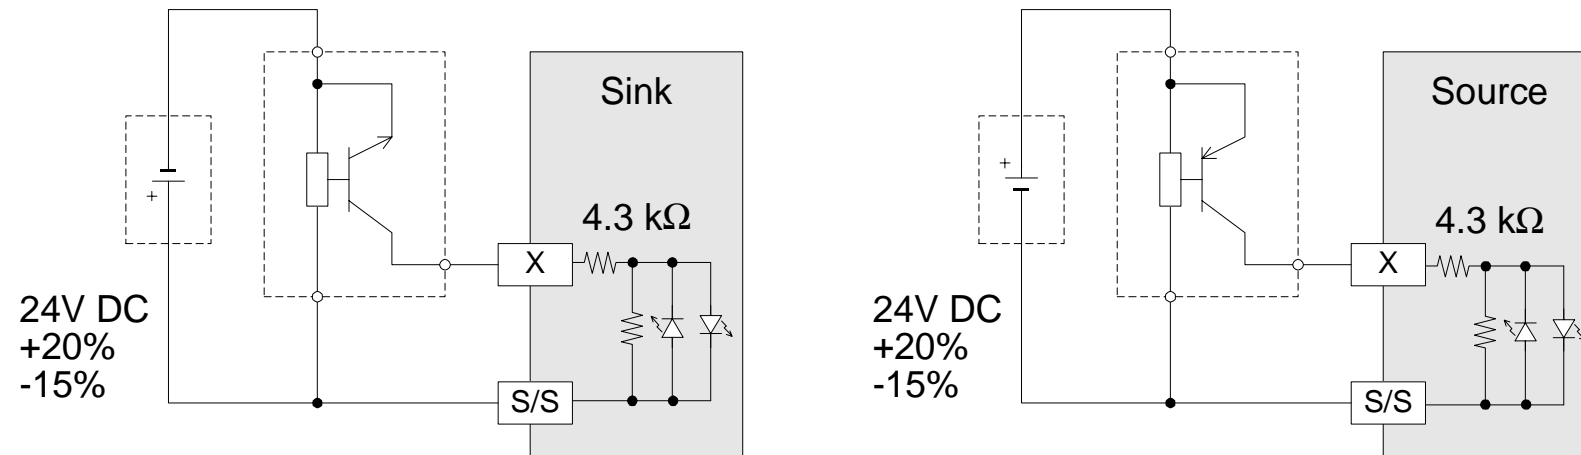




Figure 5.3 : FX_{2N} and FX_{0N} Extension block

5.1.3 Diodes and inputs connected in series;

Vdrop across the diode Max. 4V

No more than 2 LEDs should be connected in series.

Figure 5.4 : Series diodes

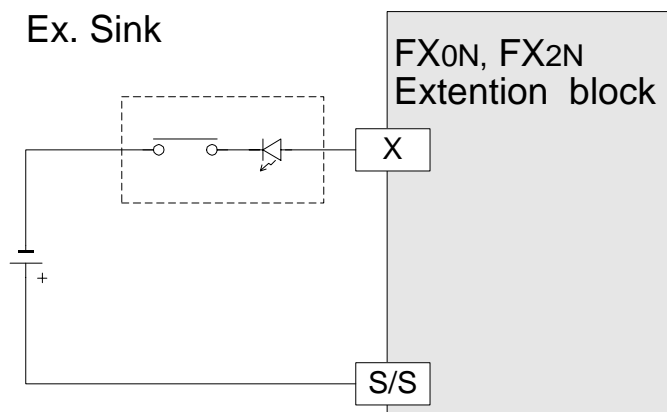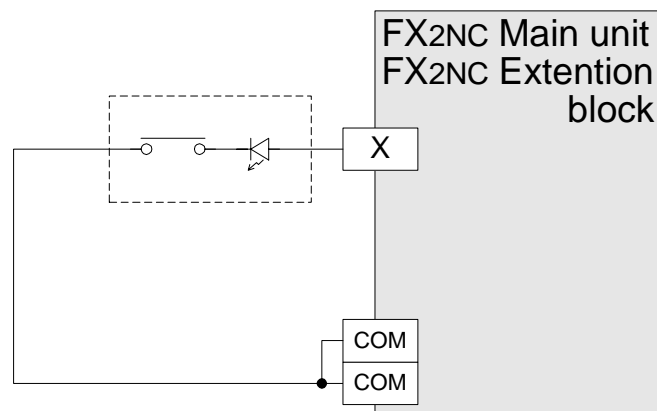

5.1.4 Resistors and inputs connected in parallel;


Parallel resistance R_p : $FX_{2NC} = 15k\Omega$. If resistance R_p is less than the stated value, then add R_b . See equation 1 for R_b calculation.

Alternatively; Current leakage: $FX_{2NC} = 1.5mA$. If the current leakage is greater than the stated value, then add R_b . See equation 2 for R_b calculation.

Figure 5.5 : Parallel LED

$$\text{Eqn 1 : } R_b \leq \frac{4R_p}{15 - R_p}$$

$$\text{Eqn 2 : } R_b \leq \frac{6}{I - 1.5}$$

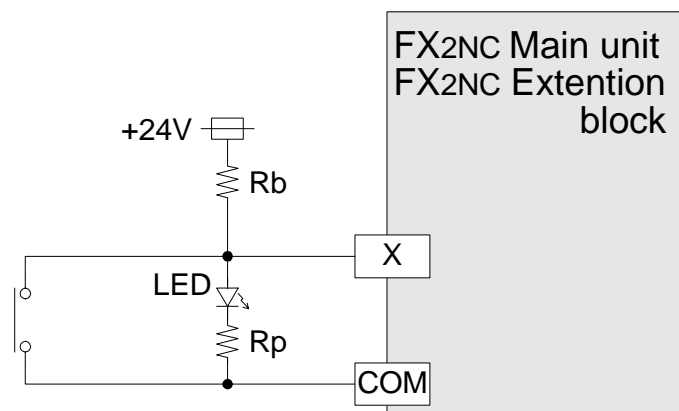


5.2 AC110V input Extension block

Table 5.3 : FX_{0N}-8EX-UA1/UL input specification

Input voltage	85-132V AC 50/60Hz
Input impedance	21kΩ/50HZ 18kΩ/60Hz
Input current	4.7mA 100V AC/50Hz 6.2mA 110V AC/60Hz
OFF → ON/ON → OFF; input switching current	80V 3.8mA/30V 1.7mA
Response time	25ms
Circuit isolation / Operation indication	Photocoupler/LED is lit

5.2.1 Input circuit connection

Figure 5.6 : FX_{0N}-8EX-UA1/UL

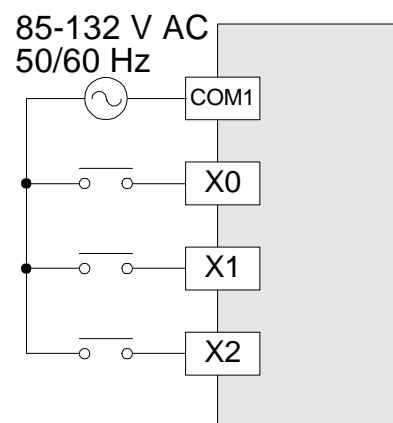


5.2.2 Programming caution



When using 110V AC units, high speed counter and interrupt routines are not suitable for use due to the long 'ON/OFF' times. The following instructions are also not suitable.

FNC 51 REFF	FNC 70 TKY
FNC 52 MTR	FNC71 HKY
FNC 56 SPD	FNC 72 DSW
FNC 68 ROTC	FNC 75 ARWS

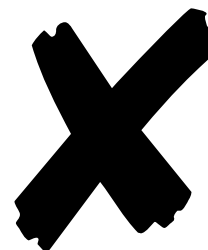

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

6. Outputs

6.1 Transistor output specification

Table 6.1 :

Switched voltage (resistive load)		5-30V DC
Rated current / N points (resistive load)		FX2NC Main unit, Extension block: 0.1A/1point, 0.8A/8point, 0.3A/1point (Y0-Y3) FX0N, FX2N Extension block: 0.5A/1point, 0.8A/4point, 1.6A/8point
Max. Inductive load		FX2NC Main unit, Extension block: 2.4W/24V DC, 7.2W/24V DC (Y0-Y3) FX0N, FX2N Extension block: 12W/24V DC
Max. lamp load (tungsten load)		FX2NC Main unit, Extension block: 0.3W/24V DC, 0.9W/24V DC (Y0-Y3) FX0N, FX2N Extension block: 1.5W/24V DC
Response time (approx.)	OFF → ON	<0.2ms (100mA/24V DC), <15μs (100mA/5V DC) (Y0,Y1)
	ON → OFF	<0.2ms (100mA/24V DC), <30μs (100mA/5V DC) (Y0,Y1)
Open circuit current leakage		0.1mA/30V DC
Circuit isolation		Photocoupler
Operation indication		LED is lit when photocoupler is driven

6.1.1 Response times


OFF times increase as the load current decreases.

For improved response times use a 'dummy' resistor, see Figure 6.1. If a response time of 0.5 ms or better is required when using 'light loads' use a 'dummy' resistor and ensure the signal line has a current greater than 60mA/24V DC.


Figure 6.1 :Dummy load

FX2NC Main unit

FX2NC Extension block

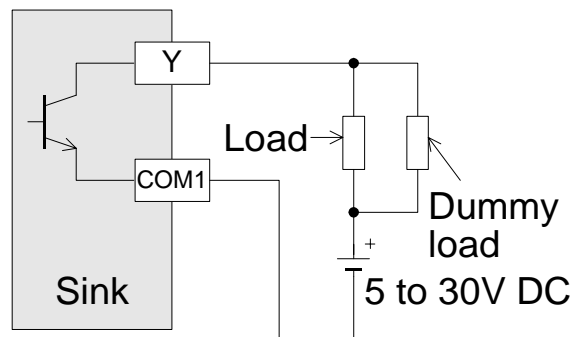

FX0N, FX2N Extension block

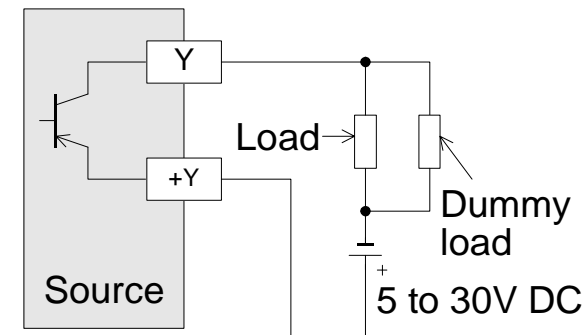

6.1.2 Transistor output example



Common points (See sec, 2.1, 2.2, 2.3)

- FX₂NC-16MT-D/UL : 8 points (COM1 See sec, 3.12)
- FX₂NC-32/64/96MT-D/UL, FX₂NC-16/32EYT-D/UL :
16 points (COM1 to COM3 See sec, 3.12)
- FX₂N Extension blocks : 8 points (+V0, +V1)
- FX₀N Extension blocks : 4 points (+V0 to +V3)

Typical wiring to the 4-point common type.

Figure 6.2:FX₀N, FX₂N Extension (Source)

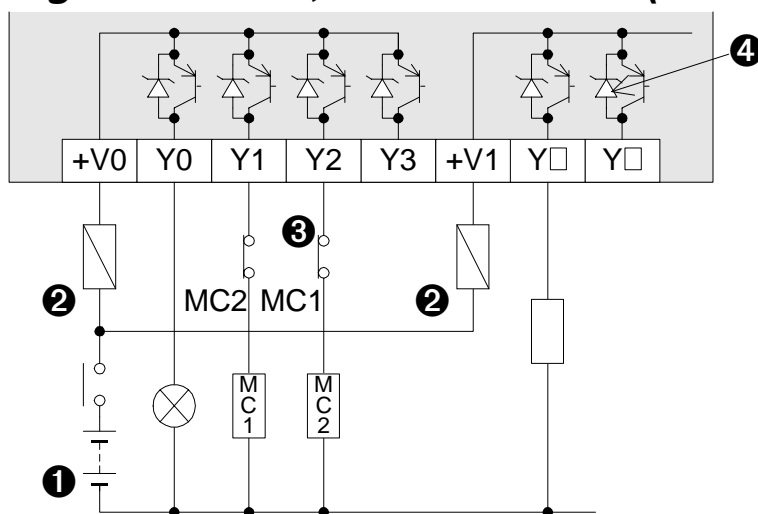


Figure 6.3:Ref. Japanese Spec. (Sink)

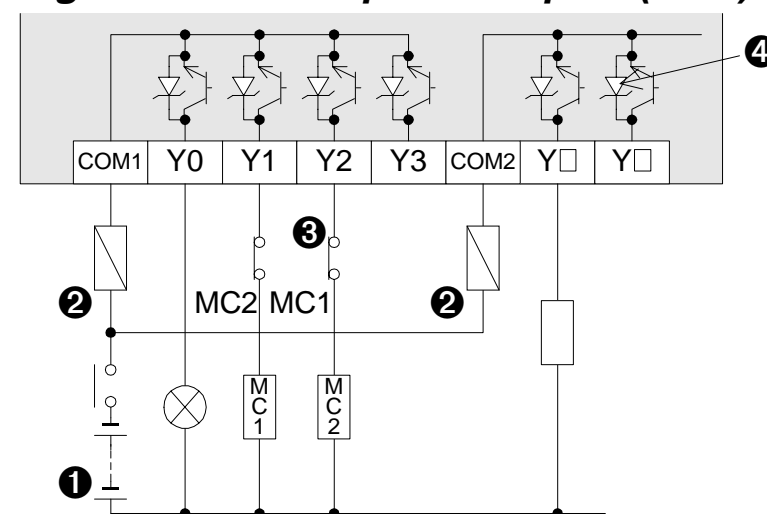


Table 6.2 : Item check

①	DC power supply	③	External, mechanical inter-lock
②	Fuse	④	Internal noise suppressor

Typical wiring to the 8 and 16-point common type.

Figure 6.4 :FX₂NC (D/UL) (Sink)

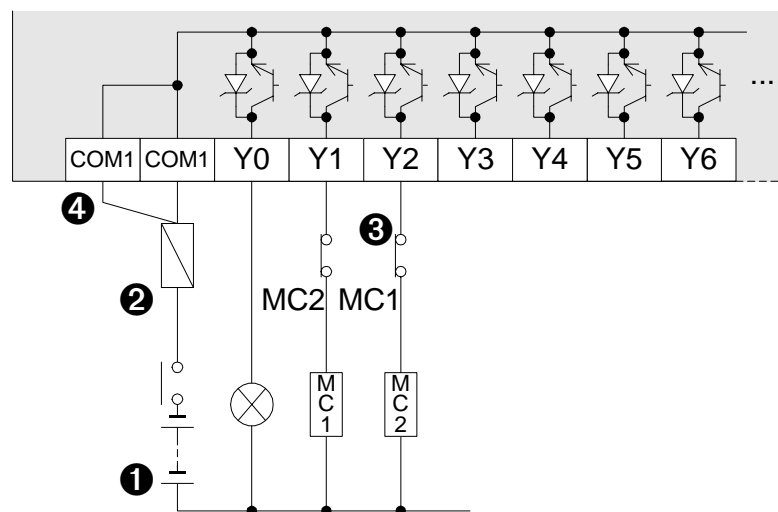


Figure 6.5 :FX₀N, FX₂N Extension (Source)

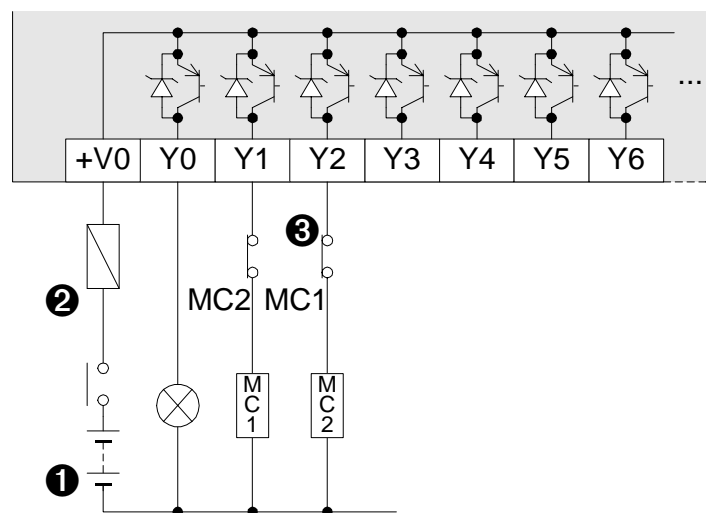



Table 6.3:Item check

①	DC power supply
②	Fuse
③	External, mechanical inter-lock
④	<div style="text-align: center;">  </div> <p>The output connectors of the main unit and the connector-type 16-point output extension blocks are the 16-point common type (8-point common type for the FX₂NC-16MT). These output connectors have two COM1 to COM3 pins that are connected to each other inside the programmable controller. To connect the line to an external unit, shortcircuit these two pins at the external circuit so that the load of each pin can be reduced.</p>

6.2 Relay output specification

Table 6.4 :

Switched voltages (resistive load)		≤ 250V AC, ≤ 30V DC
Rated current / N points (resistive load)		FX2N ,FX0N:Extension blocks 2A/1point, 8A/COM
Max. Inductive load		80VA See table 6.5
Max. lamp load (tungsten load)		100W (1.17A/85V AC, 0.4A/250V AC)
Minimum load		When supply voltage < 24V DC allow at least 5mA flow
Response time (approx.)	OFF → ON	10ms
	ON → OFF	10ms
Circuit isolation		by relay
Operation indication		LED is lit when coil is energized

6.2.1 Reliability tests



The test results in table 6.4 were gathered from a 1 sec ON/OFF test cycle. Please note that the over current induced by in-rush greatly reduces the relay contacts service life. The rated life for an inductive AC load such as a contactor or solenoid valve is 500,000 operations at 20VA.

Table 6.5 :

	20VA	35VA	80VA
Load capacity	0.2A/100VAC 0.1A/200VAC	0.35A/100V AC 0.17A/240V AC	0.8A/100V AC 0.4A/240V AC
Life of contact (cycles)	3,000,000	1,000,000	200,000
Example load (Mitsubishi contactor)	S-K10 to S-K95	S-K100 to S-K150	S-K180,S-K400

6.2.2 Relay output example

Figure 6.6: Typical wiring to the 4-point common type

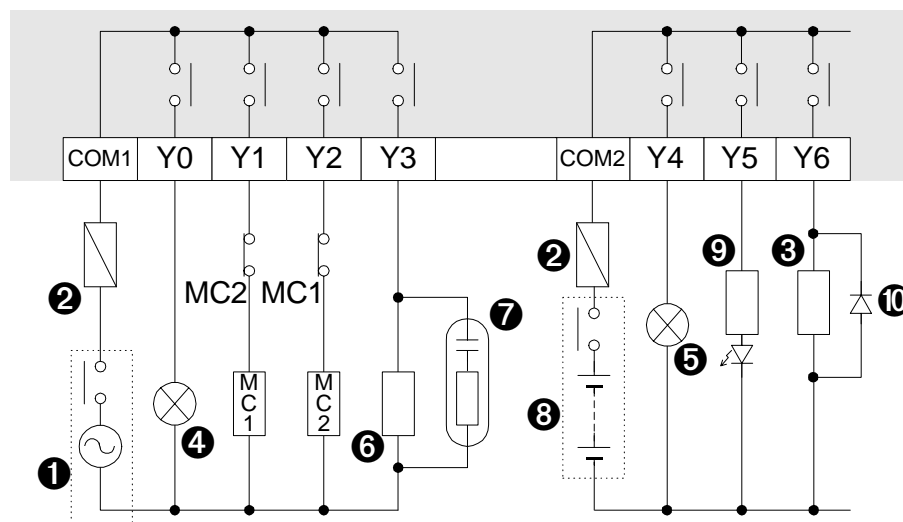


Table 6.6 : Item check

①	AC power supply
②	Fuse
③	Solenoid valve
④	Incandescent lamp
⑤	Neon lamp
⑥	Contactor
⑦	Noise suppressor 0.1μF capacitor + 100-120Ω resistor
⑧	DC power supply
⑨	LED
⑩	Surge absorbing diode



Common points (See sec, 2.1, 2.2, 2.3)

- FX_{2N} Extension blocks : 8points (COM1, COM2)
- FX_{0N} Extension blocks : 4points (COM1 to COM4)

**Figure 6.7 :Typical wiring to the
8-point common type**

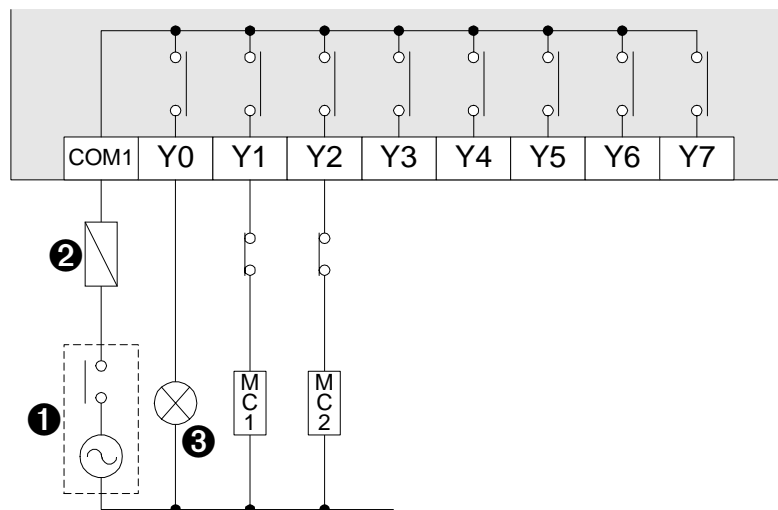


Table 6.7 :Item check

❶	AC power supply
❷	Fuse
❸	Incandescent lamp

6.3 Triac (SSR) output specifications

Table 6.8 :

Switched voltages (resistive load)		85-242V AC
Rated current / N points (resistive load)		0.3A/1point, 0.8A/COM
Max. Inductive load		15VA/100V AC, 36VA/240V AC
Max. lamp load (tungsten load)		30W (0.35A/85V AC, 0.12A/242V AC)
Minimum load		0.4VA/100V AC, 2.3VA/240V AC
Open circuit current leakage		1mA/100V AC, 2.4mA/240V AC
Response time (approx.)	OFF→ON	<1ms
	ON→OFF	<10ms
Circuit isolation		by photocoupler
Operation indication		LED is lit when photocoupler is driven

6.3.1 In-rush currents

These currents should be kept as low possible. The root mean square (I_{rms}) < 0.2A. Reference Eqn 1 for (I_{rms})

I_r -In-rush current (A)

T_r -In-rush time (sec)

I_s -Switch current (A)

T_s -Switch time (sec)

T_f -Operation time (sec)


Eqn 1

$$I_{rms} = \sqrt{\frac{I_r^2 \times T_r + I_s^2 \times T_s}{T_r + T_s + T_f}}$$

Ex.

$$0.2A = \sqrt{\frac{4^2 \times 0.02 + 0.4^2 \times 0.7}{0.02 + 0.7 + 10}}$$

Figure 6.9 :Current graph

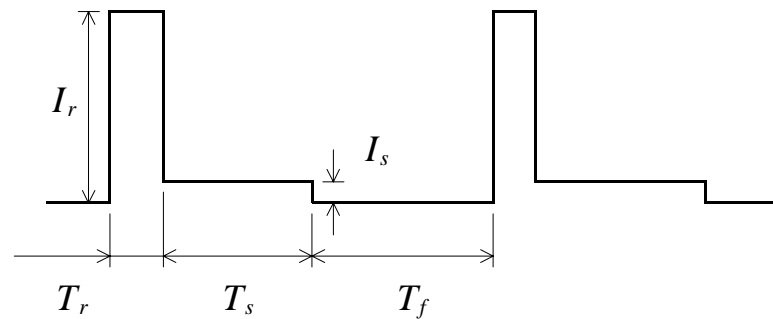

6.3.2 Triac output example

Figure 6.10: Typical wiring

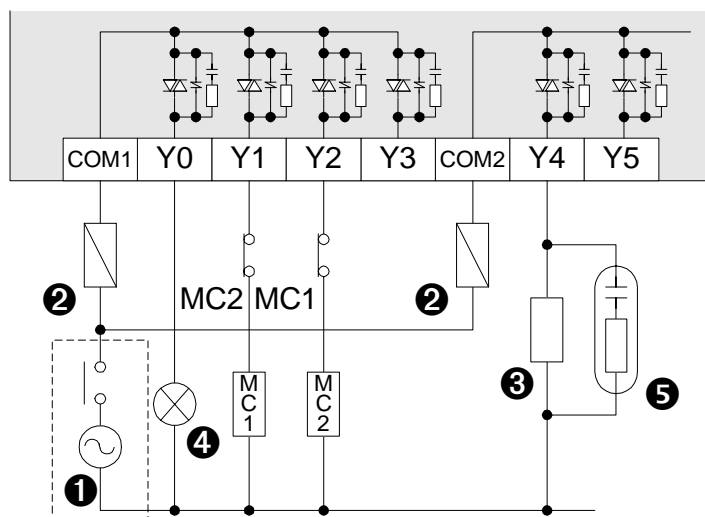


Table 6.9: Item check

①	AC power supply
②	Fuse
③	Solenoid valve
④	Incandescent lamp
⑤	Noise suppressor 0.1μF capacitor+100-120Ω resistor

6.4 Applying safe loads




Ensure all loads are applied to the same side of each PC output, see previous figures. Loads which should NEVER simultaneously operate (e.g. direction control of a motor), because of a safety critical situation, should not rely on the PC's sequencing alone. Mechanical interlocks MUST be fitted to all safety critical circuits. (See preceding figure.)

MEMO

1	INTRODUCTION
2	TERMINAL LAYOUTS
3	INSTALLATION NOTES
4	POWER SUPPLY
5	INPUTS
6	OUTPUTS
7	DIAGNOSTICS

7. Diagnostics

7.1 Preliminary checks

POWER <input type="checkbox"/> RUN <input type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Check power supply, ground and I/O cables are wired correctly.
POWER <input checked="" type="checkbox"/> RUN <input type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Turn the power supply on. Check the power LED is lit. Down load a small test program into the PC using a handheld programmer or MEDOC. Verify the program to ensure it has been written to the PC correctly. Using the programming device forcibly turn ON/OFF each output. Check the output LEDs for operation.
POWER <input checked="" type="checkbox"/> RUN <input checked="" type="checkbox"/> BATT <input type="checkbox"/> ERROR <input type="checkbox"/>	Put the PC into RUN. Check the RUN LED is lit. Check the previously down loaded program works correctly. Once all check are complete take the PC out of run and turn OFF the power supply.
	During this testing stage take extrem care not to touch any live or hazardous parts.

7.2 Basic diagnostics

The following diagnostic functions will help identify, common faults.

7.2.1 BATT LED ON


POWER ■ RUN ■ BATT ■ ERROR □	Fault BATT LED ON	Remedy Monitor M8006 with a pro- gramming tool.	Possible results	M8006:ON	If the current program and/or date is stored only in the PCs RAM, copy and store this immediately. Proceed to replace the PCs battery.
				M8006:OFF	Monitor D8005. This is the current battery voltage (in 0.1V units). Contact a Mitsubishi service center for further consideration of the problem.

7.2.2 ERROR LED flashes (PROGRAM ERROR)

POWER ■ RUN □ BATT □ ERROR ■	Fault ERROR LED flashes	Remedy Check BATT LED.	Possible results	LED OFF	Is the BATT OK? Work through BATT diagnostic. If the BATT LED is cured yet the ERROR LED still flashes check for a programming problem.
				LED is lit	Check for programming problem.

7.2.3 ERROR LED ON (CPU ERROR)

POWER ■ RUN □ BATT □ ERROR ■	Fault ERROR LED ON	Remedy Reset PC. Power OFF,ON and trigger RUN in- put.	Possible results	LED OFF	Has the memory cassette been installed or removed while the units has still been powered?
				LED is lit	A

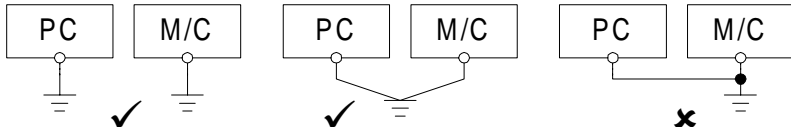A	Remedy Power OFF Discon- nect earth/ ground ter- minal Power ON	Possible results	LED is lit	B
			LED is flash- ing	Check for programming error. Ensure the earth/ ground cable is correctly rewired. 

B	Remedy Possible program/scan time error. Check D8012 for program scan time, (units 0.2 msec must be less than 0.2 sec, i.e data value <2000).	Possible results D8012 > D8000
---	--	-----------------------------------

7.3 Common errors


- Corroded contact points at some point in an I/O line.
- An I/O device has been used outside its specified operating range.
- An input signal occurs in a shorter time period that taken by one program scan.

7.4 Replacing the battery

Turn OFF PC's power supply. Remove sidecover from the PC. Remove battery from holder-disconnect and replace (this should be carried out in 20 sec if the current data held in the PC's RAM is not to be lost).

Refit battery and cover.

Figure 7.1: Battery (FX₂NC-32BL)

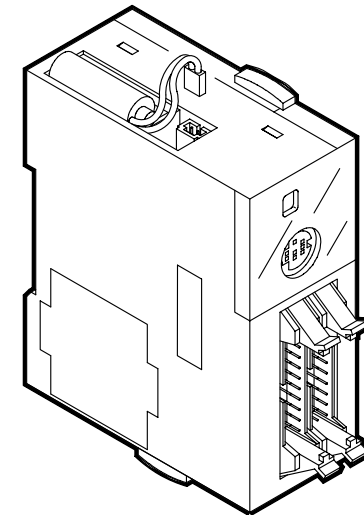


7.5 Maintenance

- Battery has a 3 year life.
- Check interior temperature of the panel.
- Check panel air filters if fitted.
- Check for loosening of terminals or mounting facilities (due to vibration).

7.6 Error flags ON indicates error.

M8004 (ref. 8004)	Error occurrence (ON when M8060-7 are ON)
M8005	Battery voltage abnormally low
M8006 (ref. D8005/6)	Latched low battery voltage flag
M8007 (ref. D8007/8)	Momentary power failure
M8008 (ref. D8008)	Power failure (see Figure 7.2)
M8009 (ref. D8009)	24V DC OFF
M8030	Battery LED OFF - Battery voltage low
M8035	Forced RUN mode
M8036	Forced RUN signal
M8037	Forced STOP signal
M8039 (ref. D8039)	Constant scan mode

M8060 (ref. D8060)	I/O configuration error
M8061 (ref. D8061)	PC hardware error
M8062 (ref. D8062)	PC/programming device communication error
M8063 (ref. D8063)	Parallel link error
M8064 (ref. D8064)	Parameter error
M8065 (ref. D8065, D8069)	Syntax error
M8066 (ref. D8066, D8069)	Program (circuit) error
M8067 (ref. D8067, D8069)	Program execution error
M8068 (ref. D8068)	Execution error latch
M8069 (ref. D8069)	I/O bus check

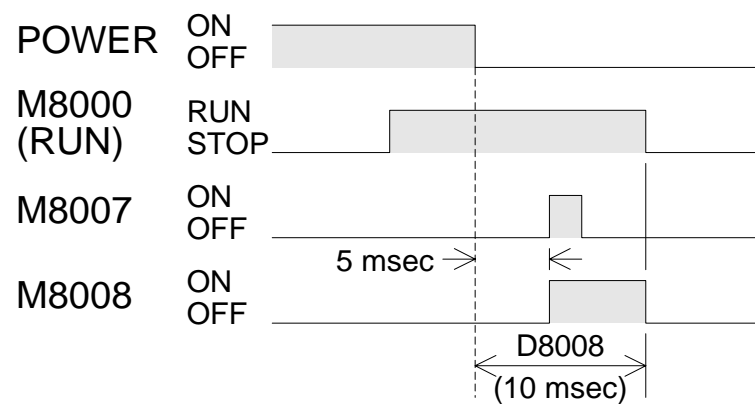Figure 7.2: Power down and its associated flags


7.7 Error registers

D8000 (default 200msec)	Watchdog timer
M8001	PC version 24201=FX2NC/FX2N V2.01 (24=FX2NC/FX2N, 201=V2.01)
M8002	Memory capacity 02=2K steps, 04=4K steps, 08=8K(16K) steps
M8003	Memory type 02H=EEPROM protect switch OFF 0AH=EEPROM protect switch ON 10H=MPU memory
M8004	Error flag number 8060=M8060, (8060-8068)
M8005	Battery voltage 36=3.6V (units 0.1V)
D8006 (default 3.0V)	Low battery detection level
D8007	Number of momentary power failures - reset on full power OFF

D8008	Power failure detection period (Automatically corrected)
D8009	Lowest device affected by 24V DC power failure

D8060	Reports location of I/O configuration error (see Figure 7.3)
D8061	Error code for PC hardware error
D8062	Error code number for programmer communications fault
D8063	Error code for parallel link fault
D8064	Parameter error code
D8065	Syntax error code
D8066	Program (circuit) error code
D8067	Program execution error code
D8068	Latched step number of execution error
D8069	Step number of errors associated with error flags M8065-M8067

Figure 7.3:
I/O configuration error, A) number, B) type.

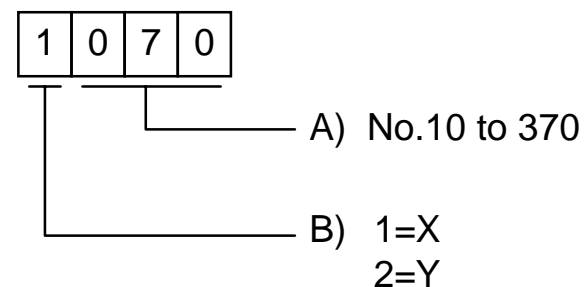

7.8 Error codes

D8061	Check cable connections	
	0000	No error
	6101	RAM error
	6102	Operation circuit error
	6103	I/O bus error (M8069 = ON)
D8062	Check the programmer / PC connections	
	0000	No error
	6201	Parity/overflow/framing error
	6202	Character error
	6203	Data sum check error
	6204	Data format error
	6205	Command error

D8063	Check both power and communications connections	
	0000	No error
	6301	Parity/overflow/framing error
	6302	Character error
	6303	Data sum check error
	6304	Data format error
	6305	Command error
	6306	Watchdog timer error

7.9 Instruction list

Table 7.1: Numerically sorted

		0	1	2	3	4	5	6	7	8	9
000	PROGRAM FLOW	CJ	CALL	SRET	IRET	EI	DI	FEND	WDT	FOR	NEXT
010	TRANSFERS, COMP	CMP	ZCP	MOV	SMOV	CML	BMOV	FMOV	XCH	BCD	BIN
020	+×÷, LOGICS	ADD	SUB	MUL	DIV	INC	DEC	WAND	WOR	WXOR	NEG
030	ROTATION, SHIFT	ROR	ROL	RCR	RCL	SFTR	SFTL	WSFR	WSFL	SFWR	SFRD
040	DATA OPERATION 1	ZRST	DECO	ENCO	SUM	BON	MEAN	ANS	ANR	SQR	FLT
050	HIGH-SPEED	REF	REFF	MTR	HSCS	HSCR	HSZ	SPD	PLSY	PWM	PLSR
060	HANDY INSTR. 1	IST	SER	ABSD	INCD	TTMR	STMR	ALT	RAMP	ROTC	SORT
070	FX I/O DEVICES	TKY	HKY	DSW	SEGD	SEGL	ARWS	ASC	PR	FROM	TO
080	FX SER DEVICES	RS	PRUN	ASCI	HEX	CCD	VRRD	VRSC	-	PID	-
110	FLOATING POINT 1	ECMP	EZCP	-	-	-	-	-	-	EBCD	EBIN
120	FLOATING POINT 2	EADD	ESUB	EMUL	EDIV	-	-	-	ESQR	-	INT
130	FLOATING POINT 3	SIN	COS	TAN	-	-	-	-	-	-	-
140	DATA OPERATION 2	-	-	-	-	-	-	-	SWAP	-	-
160	REAL TIME CLOCK	TCMP	TZCP	TADD	TSUB	-	-	TRD	TWR	-	-
170	GREY CODES	GRY	GBIN	-	-	-	-	-	-	-	-
220	IN-LINE COMPARE	-	-	-	-	LD=	LD>	LD<	-	LD≠	LD≤
230		LD≥	-	AND=	AND>	AND<	-	AND≠	AND≤	AND≥	-
240		OR=	OR>	OR<	-	OR≠	OR≤	OR≥	-	-	-

Table: 7.2 Alphabetically sorted

	Symbol	FNC No.	D	P
A	ABSD	062		
	ADD	020		
	ALT	066		
	AND□	232-238		
	ANR	047		
	ANS	046		
	ARWS	075		
	ASC	076		
	ASCI	082		
B	BCD	018		
	BIN	019		
	BMOV	015		
	BON	044		
C	CALL	001		
	CCD	084		
	CJ	000		
	CML	014		
	CMP	010		
	COS	131		

	Symbol	FNC No.	D	P
D	DEC	025		
	DECO	041		
	DI	005		
	DIV	023		
	DSW	072		
E	EADD	120		
	EBCD	118		
	EBIN	119		
	ECMP	110		
	EDIV	123		
	EI	004		
	EMULL	122		
	ENCO	042		
F	ESQR	127		
	ESUB	121		
	EZCP	111		
	FEND	006		
	FLT	049		
	FMOV	016		
	FOR	008		
	FROM	078		

	Symbol	FNC No.	D	P
G	GBIN	171		
	GRY	170		
H	HEX	083		
	HKY	071		
	HSCR	054		
	HSCS	053		
I	HSZ	055		
	INC	024		
	INCD	063		
	INT	129		
L	IRET	003		
	IST	060		
	LD□	224-230		
M	MEAN	045		
	MOV	012		
	MTR	052		
	MUL	022		
N	NEG	029		
	NEXT	009		
O	OR□	240-246		

	Symbol	FNC No.	D	P
P	PID	088		
	PLSR	059		
	PLSY	057		
	PR	077		
	PRUN	081		
	PWM	058		
R	RAMP	067		
	RCL	033		
	RCR	032		
	REF	050		
	REFF	051		
	ROL	031		
	ROR	030		
	ROTC	068		
	RS	080		
S	SEGD	073		
	SEGL	074		
	SER	061		
	SFRD	039		
	SFTL	035		
	SFTR	034		

	Symbol	FNC No.	D	P
S	SFWR	038		
	SIN	130		
	SMOV	013		
	SORT	069		
	SPD	056		
	SQR	048		
	SRET	002		
	STMR	065		
	SUB	021		
	SUM	043		
T	SWAP	147		
	TADD	162		
	TAN	132		
	TCMP	160		
	TKY	070		
	TO	079		
	TRD	166		
	TSUB	163		
	TTMR	064		
	TWR	167		
	TZCP	161		

	Symbol	FNC No.	D	P
V	VRRD	085		
	VRSC	086		
W	WAND	026		
	WDT	007		
	WOR	027		
	WSFL	037		
	WSFR	036		
X	WXOR	028		
	XCH	017		
Z	ZCP	011		
	ZRST	040		

			FX2NC
Program capacity			Built-in memory(RAM) = 8K steps FX2NC-EEPROM-4C = 2K - 4K steps FX2NC-EEPROM-16 = 2K - 16K steps FX2NC-EEPROM16C = 2K - 16K steps
Input (X) relay			X0 - 267 (184 pnts)
Output (Y) relay			Y0 - 267 (184 pnts)
Auxiliary relay (3072 pnts, + 256 pnts)			M0-M499 (500 pnts)
	Battery backup		M500-M1023 (524 pnts)
	Battery backup		M1024-M3071 (2048 pnts)
	Special function		M8000-M8255 (256 pnts)
State relay (1000 pnts)			S0-S499 (500 pnts)
	Battery backup		S500-S999 (500 pnts) (S900-S999 ANS FNC46)
Timer (256 pnts)	100 ms		T0-T199 (200 pnts)
	10 ms		T200-T245 (46 pnts)
	1 ms	Battery backup	T246-T249 (4 pnts)
	100 ms		T250-T255 (6 pnts)

		FX2NC	
Counter (256 pnts)	16 bit	C0-C99 (100 pnts)	Battery backup by Parameters
	16 bit	C100-C199 (100 pnts)	
	32 bit	C200-C219 (20 pnts)	Battery backup by Parameters
	32 bit	C200-C234 (15 pnts)	
		C235-C245	
		C246-C250	
		C251-C255	
Data register (8000 pnts, + 256 pnts)		D0-D199 (200 pnts)	Battery backup by Parameters
	Battery backup	D200-D511 (312 pnts)	
	Battery backup	D512-D7999 (7488 pnts)	D1000-D7999 File register by Parameters
	Special function	D8000-D8255 (256 pnts)	
	Index	V0-V7, Z0-Z7 (16 pnts)	
Pointer	CALL (FNC 01)	P0-P127 (128 pnts)	
	EI (FNC 04)	I00□ - I50□, I6□□ - I8□□, I010 - I060 (6, 3, 6 pnts)	
Nesting	MC /MCR	N0 - N7 (8 pnts)	
Numbers	16 bit	32 bit	
K	-32,768 to 32,767	-2,147,483,648 to 2,147,483,647	
H	0 to FFFFH	0 to FFFFFFFFH	
Float	-	0, $\pm 1.175 \times 10^{-38}$ to $\pm 3.403 \times 10^{38}$	

Under no circumstances will MITSUBISHI ELECTRIC be liable or responsible for any consequential damage that may arise as a result of the installation or use of this equipment.

All examples and diagrams shown in this manual are intended only as an aid to understanding the text, not to guarantee operation. MITSUBISHI ELECTRIC will accept no responsibility for actual use of the product based on these illustrative examples.

Owing to the very great variety in possible application of this equipment, you must satisfy yourself as to its suitability for your specific application.

HARDWARE MANUAL

FX₂NC (D/UL) SERIES PROGRAMMABLE CONTROLLERS



HEAD OFFICE: MITSUBISHI DENKI BLDG MARUNOUCHI TOKYO 100-8310 TELEX: J24532 CABLE MELCO TOKYO
HIMEJI WORKS: 840, CHİYODA CHO, HIMEJI, JAPAN

JY992D87201A
(MEE0005)

Effective MAY 2000
Specification are subject
to change without notice.